



KACO blueplanet 3.0TL3 KACO blueplanet 4.0TL3 KACO blueplanet 5.0TL3 KACO blueplanet 6.5TL3 KACO blueplanet 7.5 TL3 KACO blueplanet 8.6TL3 KACO blueplanet 9.0TL3

Manual English translation of German original

Authorised electrician

Important safety instructions

These instructions form part of the product and must be carefully read, observed and stored in a place which is freely accessible at all times.



Legal provisions

The information contained in this document is the property of KACO new energy GmbH. Publication, in whole or in part, requires the written permission of KACO new energy GmbH.

KACO warranty

For current warranty conditions contact your system integrator. http://www.kaco-newenergy.com

Definitions on product designations

In these operating instructions, the product "Photovoltaic feed-in inverter" is referred to as "device" for ease of reading.

Trademarks

All trademarks are recognised, even if not explicitly identified as such. A lack of identification does not mean that a product or designation/logo is free of trademarks.



Manual

Photovoltaic feed-in inverter

Contents

1	Gene	ral information	. 4
	1.1	About this document	. 4
	1.2	More information	. 4
	1.3	Layout of Instructions	. 5
	1.4	Identification	. 6
	1.5	Warnings on the device	. 6
	1.6	Target group	. 6
2	Safet	y	. 7
	2.1	Proper use	. 7
	2.2	Protection features	. 8
3	Descr	iption of the device	. 9
	3.1	Mode of operation	
	3.2	Device diagram	
	3.3	System layout	
4	Toch	nical data	
4	4.1	Electrical data	
	4.1	General Data	
	4.2	Environmental data	
5		portation and Delivery	
	5.1	Scope of delivery	
	5.2	Transporting the device	
	5.3	Installation tool	
6	Asser	nbly and preparation	16
	6.1	Choosing the installation location	16
	6.2	Unpacking the device	17
	6.3	Fastening the mount	18
	6.4	Installing and securing the device	19
7	Instal	lation	21
	7.1	General information	21
	7.2	Surveying the connection area	21
	7.3	Making the electrical connection	21
	7.4	Connecting the device to the power grid	22
	7.5	Connect PV generator to device	24
	7.6	Creating equipotential bonding	27
	7.7	Connecting the interfaces	28
	7.8	Sealing the connection area	31
8	Comr	nissioning	32
	8.1	Requirements	32
	8.2	Preconditions relating to standards	32
9	Confi	guration and operation	33
	9.1	Initial start-up	

	9.2	Controls	.33
	9.3	User interface	.35
	9.4	Menu structure	.36
	9.5	Monitoring the device	.51
	9.6	Performing a firmware update	.53
	9.7	Access via Modbus	.54
10	Speci	fications	55
	10.1	Reactive power control	.55
	10.2	Active power regulation	.58
	10.3	FRT	.64
	10.4	Other grid-supporting functions that are effective i the case of active power	
	10.5	Advanced islanding detection	.68
11	Main	tenance and troubleshooting	70
	11.1	Visual inspection	.70
	11.2	Cleaning	.70
	11.3	Replacing the fan	.71
	11.4	Shutting down for maintenance / troubleshooting . 72	
	11.5	Disconnecting connections	.72
	11.6	Faults	.73
	11.7	Fault messages	.74
	11.8	Troubleshooting	.75
12	Deco	mmissioning and dismantling	81
	12.1	Switching off the device	.81
	12.2	Uninstalling the device	.81
	12.3	Disassembling the device	.82
	12.4	Packaging the device	.82
	12.5	Storing the device	.82
13	Dispo	sal	83
14	Servio	ce and warranty	84
15		ndix	85
	Appe	W	



1 General information

1.1 About this document



\Lambda WARNING

Improper handling of the device can be hazardous!

> You must read and understand the operating instructions in order to install and use the device safely!

Other applicable documents

During installation, observe all assembly and installation instructions for components and other parts of the system. These instructions also apply to the equipment, related components and other parts of the system.

Some of the documents which are required to register your system and have it approved are included with the operating instructions.

Storing the documents

These instructions and other documents must be stored near the system and be available at all times.

• The current version of the operating Instructions can be downloaded from www.kaco-newenergy.com.

English translation of German original

This document has been produced in several languages. The German-language version is the original version. All other language versions are translations of the original version.

This document is valid for the following types of device from firmware version onwards

Type designation	KACO blueplanet 3.0 TL3 M2 WM OD IIG0	[1001670]
[KACO art. no.]	KACO blueplanet 4.0 TL3 M2 WM OD IIG0	[1001671]
	KACO blueplanet 5.0 TL3 M2 WM OD IIG0	[1001205]
	KACO blueplanet 6.5 TL3 M2 WM OD IIG0	[1001204]
	KACO blueplanet 7.5 TL3 M2 WM OD IIG0	[1001203]
	KACO blueplanet 8.6 TL3 M2 WM OD IIG0	[1001461]
	KACO blueplanet 9.0 TL3 M2 WM OD IIG0	[1001202]
	KACO blueplanet 10.0 TL3 M2 WM OD IIG0	[1001460]

1.2 More information

Links to more detailed information can be found at www.kaco-newenergy.com

Document title	Document type
Technical data sheet	Product flyer
Remote access via web interface	Application note - operation
Grid and system protection Powador-protect operating instructions	Application note
Modbus protocol RS485 protocol reactive power control	Application note
SunSpec Information Model Reference SunSpec Information Model Reference KACO	Excel files for software version with application note "Mod- bus protocol" under https://kaco-newenergy.com/down- loads/
Software package	ZIP/KUF files for current software
EU Declaration of Conformity Country-specific certificates Certification for specific subassembly	Certificates



1.3 Layout of Instructions

1.3.1	Symbols used		
	General hazard	Fire and risk of explosion	
	Electrical voltage	Risk of burns	
	Earthing - ground conductor		

1.3.2 Safety warnings symbols guide



A DANGER High risk

Failure to observe this warning will lead directly to serious bodily injury or death.



A WARNING

Potential risk

Failure to observe this warning may lead to serious bodily injury or death.



Low-risk hazard

Failure to observe this warning will lead to minor or moderate bodily injury.

▲ CAUTION

Risk of damage to property

Failure to observe this warning will lead to property damage.

1.3.3 Additional information symbols



Useful information and notes

Information that is important for a specific topic or objective, but that is not safety-relevant.

1.3.4 Symbols for instructions

NOTE

\circlearrowright Prerequisite for use

1 Carry out the next step

2 Additional action sequence

- \Rightarrow Interim result of the action
- » End result



1.4 Identification

You will find the name plate with the following data for service and other requirements specific to installation on the right side panel of the product:


- Product name
- Part no.
- Serial number
- Date of manufacture
- Technical data
- **Disposal information** .
- Certification marking, CE marking.

1.5 Warnings on the device

A warning sticker is affixed to the device. Read the warnings carefully.

Do not remove the sticker. If the sticker is missing or is illegible, please contact a KACO representative or distributor.

Article number:

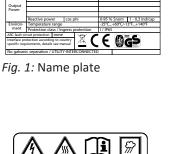



касо 🖉

Input

Dutpu

Fig. 2: Warning sticker

1.6 Target group

All activities described in the document may only be carried out by specially trained personnel with the following qualifications:

- . Knowledge about how an inverter functions and operates
- Knowledge about IP-based network protocols
- . Knowledge of the Modbus specifications
- Knowledge of the SunSpec Modbus specifications •
- Education concerning the installation and configuration of IT systems
- Training in the handling of hazards and risks during the installation and operation of electrical devices and systems.
- Education concerning the installation and start-up of electrical devices and systems. •
- Knowledge of applicable standards and directives.
- Knowledge and adherence to this document with all safety notices.



2 Safety

Before using the product for the first time, please read through the safety instructions carefully.

🚹 DANGER

Lethal voltages are still present in the connections and cables of the device even after the device has been switched off and disconnected!

Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched.

- $\rightarrow\,$ The device must be mounted in a fixed position before being connected electrically.
- > Comply with all safety regulations and current technical connection specifications of the responsible power supply company.
- > The device is only permitted to be opened or serviced by a qualified electrician.
- > Switch off the grid voltage by turning off the external circuit breakers.
- $^{\scriptscriptstyle >}\,$ Check that all AC and DC cables are completely free of current using a clip-on ammeter.
- > Do not touch the cables and/or terminals/busbars when switching the device on and off.
- > Keep the device closed when in operation.

The electrician is responsible for observing all existing standards and regulations. The following applies:

- · Keep unauthorised persons away from the device and/or system.
- In particular, making sure that the locally applicable version of the standard ¹ "Requirements for special installations or locations – solar photovoltaic (PV) power supply systems" is observed.
- Ensure operational safety by providing proper grounding, conductor dimensioning and appropriate protection against short circuiting.
- · Observe all safety instructions on the product and in these operating instructions.
- Switch off all voltage sources and secure them against being inadvertently switched back on before performing visual inspections and maintenance.
- · When taking measurements on the live device:
 - Do not touch the electrical connections
 - Remove all jewellery from wrists and fingers
 - Ensure that the testing equipment is in safe operating condition.
- Modifications to the surroundings of the device must comply with the applicable national and local standards.
- When working on the PV generator, in addition to disconnecting this from the grid it is also necessary to switch off the DC voltage using the DC isolator switch on the device.

2.1 Proper use

The device is a transformerless PV inverter which converts the direct current of the PV generator into grid-compatible three-phase alternating current and then feeds the three-phase alternating current into the public power grid.

The device is built using state-of-the-art technology and in accordance with the recognized safety rules. Nevertheless, improper use may cause lethal hazards for the operator or third parties, or may result in damage to the product and other property.

The device is intended for indoor and outdoor applications and may only be used in countries for which it has been approved or for which it has been released by KACO new energy and the grid operator.

Country	Standard
EU	Harmonised document - HD 60364-7-712 (European im- plementation of the IEC standard)
USA	PV section of NEC 690 and sections in article 100, 690.4 690.6 and 705.10

Tab. 1: Examples of standards specific to business premises

KACO blueplanet 3.0TL3 KACO blueplanet 4.0TL3 KACO blueplanet 5.0TL3 KACO blueplanet 6.5TL3 KACO blueplanet 7.5 TL3 KACO blueplanet 8.6TL3 KACO blueplanet 9.0TL3 KACO blueplanet 10.0TL3



Operate the device only with a permanent connection to the public power grid. The country and grid type selection must be commensurate with the respective location and grid type.

The requirements of the grid operator must be met for grid connection to take place. The permission of the relevant authorities may also be required in order to secure authorisation to connection to the grid.

The enclosed documentation is an integral part of the product. The documentation must be read, observed and stored in a place which is freely accessible at all times.

The name plate must be permanently attached to the product.

Any other or additional use of the device shall be regarded as improper.

This includes:

- · Use of a distribution system that is not described (grid type)
- Use of sources other than PV-strings.
- Mobile use
- · Use in rooms where there is a risk of explosion
- · Use in direct sunlight, rain or a storm or other harsh environmental conditions
- Outdoor use in environmental conditions that exceed the limits stated in the technical specifications >Environmental data.
- · Operation outside the specification intended by the manufacturer
- Overvoltage on the DC connection of over 1500 V 1,000 V
- · Modifying the device
- Standalone mode

2.2 Protection features

The following monitoring and protection functions are built-in:

- Overvoltage conductor / varistor to protect the power semiconductors from high-energy transients on the grid and generator sides.
- Device temperature monitoring system
- · EMC filter to protect the inverter from high-frequency grid interference
- · Grid-side varistors grounded to earth to protect the product against burst and surge pulses
- · Anti-islanding detection according to the current standards.
- · Isolation detection / residual current monitoring and disconnection function to detect isolation faults

NOTE



If the device is connected, the overvoltage conductors / varistors contained in the device have an impact on the electrical system insulation resistance test as per HD 60364-6 / IEC 60364-6 Low-voltage installations- Part 6: Verification.

IEC 60364-6 6.4.3.3 describes two options for this case. The first option is to disconnect devices with an overvoltage conductor or, if this is not practicable, then the test voltage can be reduced to 250V.

KACO

3 Description of the device

3.1 Mode of operation

The device converts the DC voltage generated by the PV-modules into AC voltage and feeds this into the power grid. The starting procedure begins when there is sufficient sunlight and a specific minimum voltage is present in the device. The feed-in process begins once the PV generator has passed the insulation test and the grid parameters are within the requirements imposed by the grid operator for a specific monitoring time. If, as it gets dark, the voltage drops below the minimum voltage value, feed-in mode ends and the device switches off.

3.2 Device diagram

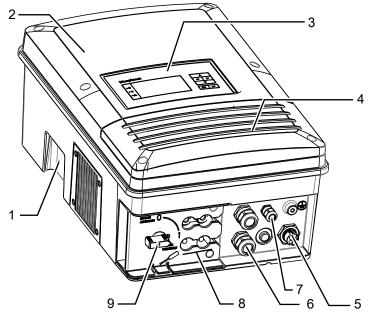


Fig. 3: Device diagram

Key			
1	Housing	6	Interfaces / cable feed-through
2	Cover	7	Communication - USB port / cable feed-through
3	Status indicator with display and operator panel	8	DC connection / DC connector
4	Cover for the connection area	9	DC isolator switch
5	AC connection / 5-pole connector		

3.2.1 Mechanische Komponenten

The DC isolator switch is located on the underside of the device. The DC isolator switch is used to disconnect the inverter from the PV generator in order to carry out service.

Disconnecting the device from the PV generator

Switch the DC isolator switches from 1 (ON) to 0 (OFF).

Connecting the device to the PV generator

Switch the DC isolator switches from 0 (OFF) to 1 (ON).

3.2.2 Electrical functions

A potential-free relay contact is integrated into the device. Use this contact for one of the following functions:

Potential-free relay

The potential-free relay contact closes as soon as there is a fault during operation. You use this function, for example, to signal a fault visually or acoustically.



Fig. 4: DC isolator switch



Priwatt

The energy that is provided by the PV system can be put to use directly by the appliances that are connected in your home.

The potential-free contact can switch larger appliances (e.g. air conditioning units) on and off with the Priwatt function activated. This requires an external power supply and an external load relay.

When the function is active, either the remaining runtime (in hours and minutes) or the shutdown threshold (in kW) is displayed on the start screen depending on the operating mode selected. The "priwatt" function is not active in the unit's delivery state. The option can be configured in the Settings menu.

3.2.3 Interfaces

You can configure the interfaces and the web server in the Settings menu. The device has the following interfaces for communication and remote monitoring.

Ethernet interface

Monitoring can occur directly on the unit using the integrated Ethernet interface. A local web server is installed in the unit for this purpose. This can also be used to request measured values remotely.

For monitoring a system comprising several inverters, we recommend you use an external data logging and monitoring system.

RS485 interface

Use this monitoring option if you cannot check the functioning of the system on-site on a regular basis, e.g. if your place of residence is located a great distance from the system. To connect the RS485 interface, contact your authorised electrician.

For monitoring your PV system using the RS485 interface, KACO new energy GmbH offers monitoring devices.

USB interface

The USB connection of the device is a type A socket. It is located on the underside of the housing and is protected by a safety cover. The USB connection is specified to draw 500 mA of current.

Use the USB interface to read out stored operating data, load firmware updates or device configurations using a FAT32-formatted USB stick.

"Inverter Off" input

In addition to the safety functions, the internal interface switches can also be actuated via the "Inverter Off" input.

The Powador-protect or a protective device from another manufacturer can be used for this purpose.

If a Powador-protect is used as the central interface protection, the fail-safe disconnection of suitable KACO inverters from the public grid can be carried out by the internal interface switches instead of separate interface switches. This requires the inverters in the photovoltaic system to be connected to the Powador-protect.

Information on installation and use can be found in this manual, in the Powador protect manual and in the instructions for use of the Powador protect on the KACO web site.

On the "Inverter Off" input, instead of the Powador-protect an interface protection device from another supplier an also be connected to actuate the internal interface switches.

Digital inputs

You can extend the unit with additional digital inputs by means of an extension module (available from KACO customer service). This can be used to connect a ripple control receiver or a protective shutdown system.



3.3 System layout

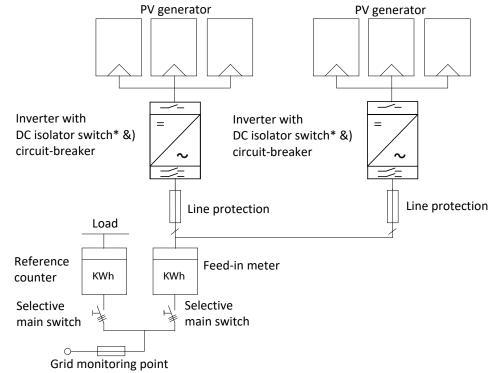


Fig. 5: Circuit diagram of a system with two inverters

Кеу	Definition / information on the connection
PV generator	The PV generator converts the radiant energy of sunlight into electrical energy.
Inverter with circuit-breaker	The PV generator is connected to the device's DC connec- tion.
Line protection	The circuit breaker is an overcurrent protection device.
Feed-in meter	The feed-in meter is to be specified and installed by the power supply company. Some power supply companies also allow the installation of your own calibrated meters.
Selective main switch	The selective main switch is to be specified by the power supply company.
Reference counter	The reference counter is to be specified and installed by the power supply company. This measures the amount of energy drawn.
DC isolator switch	Use the DC isolator switch to disconnect the device from the PV generator.



4 Technical data

4.1 Electrical data

	KACO blue- planet 3.0 TL3 M2 WM OD IIG0	KACO blue- planet 4.0 TL3 M2 WM OD IIG0	KACO blue- planet 5.0 TL3 M2 WM OD IIG0	KACO blue- planet 6.5 TL3 M2 WM OD IIG0	KACO blue- planet 7.5 TL3 M2 WM OD IIG0	KACO blue- planet 8.6 TL3 M2 WM OD IIG0 - 3TL301	KACO blue- planet 9.0 TL3 M2 WM OD IIG0	KACO blue- planet 10.0 TL3 M2 WM OD IIG0 - 3TL301
DC Input levels				Input le	vels (DC)			
Recommended generator power range	3.6 kW	4.8 kW	6 kW	7.8 kW	9 kW	10.3 kW	10.8 kW	12 kW
MPPrange@Pnom	200-	800 V	240-800 V	310-800 V	350-800 V	403-800 V	420 - 800 V	470-800 V
Working range	200 V	- 950 V	200 V -950 V		2	200 V - 950	V	
Rated voltage				65	3 V			
Starting voltage				25	0 V			
Open circuit voltage	1,0	00 V	1000 V			1,000 V		
Max. input current ²	2 x 11 A							
Number of strings	1							
Number of MPP controls					2			
Max. short-circuit current (ISC max.)				2 x	16 A			
Input source feedback current				0	А			
Polarity safeguard	_			У	es			
String fuse				r	10			
DC overvoltage protection				Bui	lt-in			
	KACO blue- planet 3.0 TL3 M2 WM OD IIG0	KACO blue- planet 4.0 TL3 M2 WM OD IIG0	KACO blue- planet 5.0 TL3 M2 WM OD IIG0	KACO blue- planet 6.5 TL3 M2 WM OD IIG0	KACO blue- planet 7.5 TL3 M2 WM OD IIG0	KACO blue- planet 8.6 TL3 M2 WM OD IIG0 -	KACO blue- planet 9.0 TL3 M2 WM OD IIG0	KACO blue- planet 10.0 TL3 M2 WM OD IIG0 -
	1					3TL301		3TL301
AC Output levels			1	-	evels (AC)		1	1
Nominal power	3 kVA	4 kVA	5 kVA	6.5 kVA	7.5 kVA	8.6 kVA	9 kVA	10 kVA
Rated voltage	220 / 380 V [3/N/PE]; 230 / 400 V [3/N/PE]; 240 / 415 V [3/N/PE]							
Voltage range: continuous opera- tion				305 V - 48	O V [Ph-Ph]			

² The "Max. input current" is the maximal theoretical value during operation at full power and minimal MPP voltage. The inverter will clip to the maximum AC power output.

The "Max. short-circuit current (ISCmax.)" defines together with open circuit voltage (Uocmax) the characteristic of the connected PV generator. This is the relevant value for string sizing and is the absolute maximal limit for inverter protection. The connected PV-Generator must be designed, that the max short circuit current is below or equal to ISCmax of the inverter under all foreseeable conditions. In no condition the design may result in a greater short circuit current than ISCmax of the inverter.Designing the PV generator [See section 7.5.4] Page 26].



	KACO blue- planet 3.0 TL3 M2 WM OD IIG0	KACO blue- planet 4.0 TL3 M2 WM OD IIG0	KACO blue- planet 5.0 TL3 M2 WM OD IIG0	KACO blue- planet 6.5 TL3 M2 WM OD IIG0	KACO blue- planet 7.5 TL3 M2 WM OD IIG0	KACO blue- planet 8.6 TL3 M2 WM OD IIG0 - 3TL301	KACO blue- planet 9.0 TL3 M2 WM OD IIG0	KACO blue- planet 10.0 TL3 M2 WM OD IIG0 - 3TL301
Rated current	[@415V]; 3x 4.35 A [@400V];	[@415V]; 3x 5.80 A [@400V]; 3x 6.10 A	3x 7.00 A [@415V]; 3x 7.25 A [@400V]; 3x 7.60 A [@380V]	[@415V]; 3x 9.50 A [@400V];	3x 10.90 A	3x 12.50 A	3 x 13.00 A [@400V]; 3 x 13.70 A	3x 14.50 A
Max. continuous current	3 x 4.8 A	3 x 6.4 A	3 x 8.0 A	3 x 10.5 A	3 x 12.0 A	3 x 13.2 A	3 x 14.0 A	3 x 15.5 A
Contribution to peak short-circuit current ip		34.96 A		35 A		41 A	35 A	41 A
Initial short-circuit alternating current (Ik" first single period ef- fective value)			16.5 A	1		18.9 A	16.5 A	18.9 A
Short circuit current continuous [ms] (max output fault current)	1,3	3 A	1.3 A			1,3 A		
Inrush current				1.033 A [R	MS (20ms)]			
Rated frequency	50/60 Hz							
Frequency range	45 - 65 Hz							
Reactive power				0 - 95%	6 Snom			
cos phi				1 - 0.3	ind/cap			
Number of feed-in phases	3							
Distortion factor (THD)	0.36 %	0.32 %	0.31 %	0.29 %		3.8	5 %	0.27 %
Max. voltage range (up to 100 s)	287.5 V / 500 V							
AC overvoltage protection no								

4.2 General Data

	KACO blue- planet 3.0 TL3 M2 WM OD IIG0	KACO blue- planet 4.0 TL3 M2 WM OD IIG0	KACO blue- planet 5.0 TL3 M2 WM OD IIG0	KACO blue- planet 6.5 TL3 M2 WM OD IIG0	KACO blue- planet 7.5 TL3 M2 WM OD IIG0	KACO blue- planet 8.6 TL3 M2 WM OD IIG0 - 3TL301	KACO blue- planet 9.0 TL3 M2 WM OD IIG0	KACO blue- planet 10.0 TL3 M2 WM OD IIG0 - 3TL301
	-	Gener	al electrica	l data				
Max. efficiency	98.1 %	98.2 %			98.3 %			98.5 %
European efficiency	96.6 %	97.1 %	97.4 %	97.6 %	97.7 %	97	.9 %	98.3 %
Self consumption: Standby	3 W							
Feed-in from	20 W							
Transformer unit					no			
Protection class / over voltage category	III / III							
Grid monitoring	Country-specific							
Distribution system	TN-C-System, TN-C-S-System, TN-S-System, TT-System							

KACO blueplanet 3.0TL3 KACO blueplanet 4.0TL3 KACO blueplanet 5.0TL3 KACO blueplanet 6.5TL3 KACO blueplanet 7.5 TL3 KACO blueplanet 8.6TL3 KACO blueplanet 9.0TL3 KACO blueplanet 10.0TL3



	KACO blue- planet 3.0 TL3 M2 WM OD IIGO	KACO blue- planet 4.0 TL3 M2 WM OD IIG0	KACO blue- planet 5.0 TL3 M2 WM OD IIG0	KACO blue- planet 6.5 TL3 M2 WM OD IIG0	KACO blue- planet 7.5 TL3 M2 WM OD IIG0	KACO blue- planet 8.6 TL3 M2 WM OD IIG0 - 3TL301	KACO blue- planet 9.0 TL3 M2 WM OD IIG0	KACO blue- planet 10.0 TL3 M2 WM OD IIGO - 3TL301
General Data								
Display			(Graphical di	isplay + LEC)s		
Controls			4	-way butto	n + 2 butto	ns		
Menu languages		D	E; EN; FR; I	T; ES; PL; N	L; PT; CZ; H	U; SL; TR; F	NO	
Interfaces		Standar	d: 2 x Ethe	rnet, USB, F	RS485, opti	onal: S0, 4-	DI, 4-DO	
Communication			TCP	/IP, Modbu	us TCP, Suns	spec		
Potential-free relay			Potential-f	ree NO con	tact, max. 3	30 V/1 A DO	2	
DC isolator switch	yes							
AC isolator switch	no							
Cooling				Fa	an			
Number of fans					1			
Noise emission	< 53	db(A)	<53 db(A)			< 53 db(A)		
Housing material	Aluminium / plastic							
HxWxD	522 mm x 363 mm x 246 mm							
Weight	30 kg							
Certifications			Overview	: see home	page / dow	nload area		

4.3 Environmental data

	TL3 M2 WM OD		KACO blue- planet 5.0 TL3 M2 WM OD IIG0	KACO blue- planet 6.5 TL3 M2 WM OD IIG0	KACO blue- planet 7.5 TL3 M2 WM OD IIG0	KACO blue- planet 9.0 TL3 M2 WM OD IIG0	KACO blue- planet 10.0 TL3 M2 WM OD IIG0 - 3TL301
Installation height				3,0	00m		
Installation distance from coast	>2000 m						
Ambient temperature	-25 °C - 60 °C -25 °C25 °C - 60 °C +60 °C						
Power derating from				40	°C		
Protection rating (KACO installa- tion location)	IP65 / NEMA 4						
Humidity range (non-condens- ing) [%]	100%						

5 Transportation and Delivery

Every product leaves our factory in perfect electrical and mechanical condition. Special packaging ensures that the devices are transported safely. The shipping company is responsible for any transport damage that occurs.

5.1 Scope of delivery

- Inverter
- Mount
- Installation kit
- · Documentation EN (quick start guide in other languages)

Check the equipment included

- 1. Inspect the device thoroughly.
- 2. Immediately notify the shipping company in case of the following:
 - Damage to the packaging that indicates that the device may have been damaged.
 - Obvious damage to the device.
- 3. Send a damage report to the shipping company immediately.
- 4. The damage report must be received by the shipping company in writing within six days following receipt of the device. We will be glad to help you if necessary.

5.2 Transporting the device

▲ CAUTION

Hazard due to impact; risk of breakage to the device!

- > Pack the device securely for transport.
- > Transport the device using the intended carrying handles of the packaging box.
- > Do not expose the device to any shocks.

For safe transportation of the product, use the hand recesses in the carton.



Packaging	Folding cardboard box
Packaging size	390 x 510 x 66 mm
Total weight incl. packaging	35.2 kg

Fig. 6: Transporting the device

5.3 Installation tool

The codes given in the table below are used in all usage instructions for assembly/installation/maintenance and disassembly for the tools and tightening torques being used.

Code (s)	Shape of the connector	🗙 / 🛋 _ Nm	
★w	External hexagon	Tightening torque	
XA	Internal hexagon	Spanner size or number	
Хт	Torx	Outer contour	
★s	Slot	<i>Fig. 7:</i> Form pattern	
Tab 2: Koy and de	accription of tool codes	ng. 7. ronn pattern	

Tab. 2: Key and description of tool codes





6 Assembly and preparation

6.1 Choosing the installation location

▲ DANGER



Risk of fatal injury due to fire or explosions! Fire caused by flammable or explosive materials in the vicinity of the device can lead to serious injuries.

> Do not mount the inverter in potentially explosive atmospheres or in the vicinity of highly flammable materials.

▲ CAUTION

Property damage due to gases that have an abrasive effect on surfaces when they come into contact with ambient humidity caused by weather conditions.

The device housing can be seriously damaged due to gases in combination with air humidity resulting from weather conditions (e.g. ammonia, sulphur).

- > If the device is exposed to gases, the installation must be carried out at observable locations.
- > Perform regular visual inspections.
- > Immediately remove any moisture from the housing.
- > Ensure adequate ventilation at the installation location.
- > Immediately remove dirt, especially on vents.
- > Failure to observe these warnings may lead to device damage which is not covered by the manufacturer warranty.



NOTE

Access by maintenance personnel for service

Any additional costs arising from unfavourable structural or mounting conditions shall be billed to the customer.

Installation space

- As dry as possible, climate-controlled, the waste heat must be dissipated away from the device.
- · Unobstructed air circulation.
- When installing the device in a control cabinet, provide forced ventilation for sufficient heat dissipation.
- · Close to the ground, accessible from the front and sides without requiring additional resources.
- Protected on all sides against direct weather exposure and sunlight (thermal heating) in outdoor areas. Implementation where necessary via constructional measures, e.g. wind breaks.

Installation surface

- Must have adequate load-bearing capacity
- · Must be accessible for installation and maintenance
- Must be made out of heat-resistant material (up to 90 °C)
- Must be flame resistant
- Minimum clearances to be observed during installation: [See figure 13] [> Page 18]



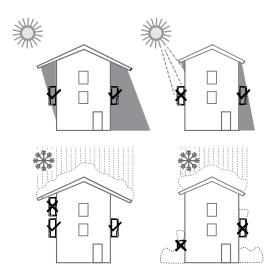


Fig. 8: Device for outdoor installation

6.2 Unpacking the device


A CAUTION



Risk of injury caused by excessive physical strain.

Lifting the device, for transport, relocation and assembly, can result in injuries (e.g. back injuries).

- > Only lift the device using the openings provided.
- $^{\scriptscriptstyle >}\,$ The device must be transported and installed by at least 2 persons.

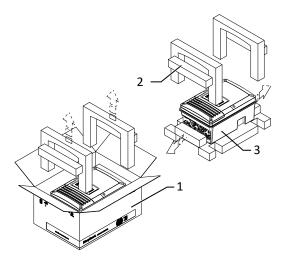

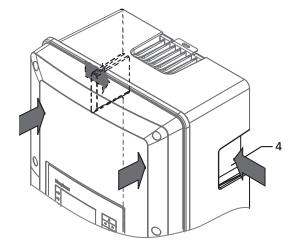


Fig. 9: Permissible installation location

Fig. 10: Unpacking the unit

Fig. 11: Lift the unit

Кеу			
1	Packaging	3	Device
2	Protective packaging	4	Grip recesses
ひ The	device is transported to the installation	location.	
1 Loo	sen packaging tape from cardboard box.		
2 Ope	en carton at the front.		
3 Ren	nove installation material and documenta	ation.	
4 Pull	up top protective packaging to remove.		
5 Ren	nove device from the packaging.		
6 Plac	ce the protective packaging back into the	carton.	



7 Lift the device at the intended positions.

» Continue installing the mount.


6.3 Fastening the mount




If unsuitable fixing materials are used, the device could fall and persons in front of the device may be seriously injured.

- > Use only fixing materials that are suitable for the mounting base. The fastening materials supplied are only suitable for masonry and concrete.
- > Only install the device in an upright position.

Hazard when using unsuitable fixing materials!

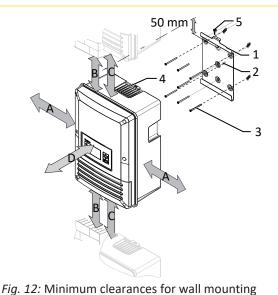

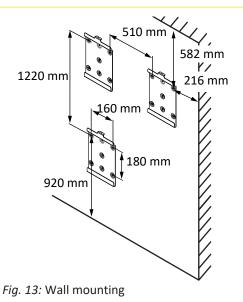

1	Mount	4	Bracket with detachment protector
2	Fixings for mounting [S6 – \emptyset 6mm/ 50mm]	5	Screw for securing purposes (1x)
3	Screws for mounting 5x 5x50 [Z2+Slot 5x50 Fastening the mount [See section 6.3▶ Page 18]]		
4	Minimum clearance: 150 mm (without device304.5 mm) recommended distance475 mm (without device 510 mm *)	C	Minimum clearance: 700 mm
3	Minimum clearance: 500 mm	D	Recommended clearance: 250 mm

1 Mark the mounting position on the wall surface according to the position of the mount by drawing a line.

2 Mark the positions of the drill holes using the slot in the mount.

NOTE: The minimum clearances between two devices, or the device and the ceiling or floor have already been taken into account in the diagram.

3 Fix the mount to the wall using suitable mounting fixtures from the mounting kit.

NOTE: Make sure that the mount is oriented correctly.

» Proceed with the installation of the device.

Kev



6.4 Installing and securing the device

\land CAUTION



Risk of injury from improper lifting and transport.

If the device is lifted improperly, it can tilt and result in a fall.

- $\rightarrow\,$ Always lift the device vertically using the openings provided.
- > Use a climbing aid for the chosen installation height.
- > Wear protective gloves and safety shoes when lifting and lowering the device.


NOTE

Power reduction due to heat accumulation!



If the recommended minimum clearances are not observed, the device may go into power regulation mode due to insufficient ventilation and the resulting heat build-up.

- $\rightarrow\,$ Observe minimum clearances and provide for sufficient heat dissipation.
- > All objects on the device housing must be removed during operation.
- > Ensure that no foreign bodies prevent heat dissipation following device installation.

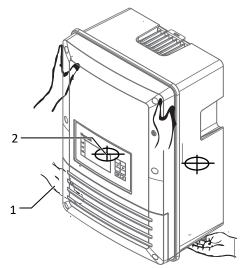

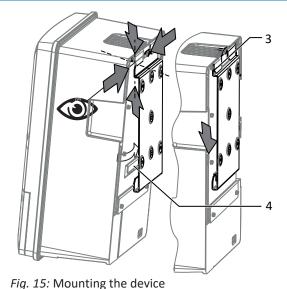


Fig. 14: Lifting the housing

Kov

ICC y			
1	Opening	3	Insertion lugs
2	Centre of gravity	4	Mounting bracket

Lifting and installing the device

 \circlearrowright The mount has been installed.

1 Lift the device using the lateral openings . Observe the device's centre of gravity!

- 2 Fit the device onto the upper mount by means of the mounting bracket. Fit the device onto the lower mounting bracket in full so that the device sits flush with its rear side on the mount. [See figure 15] [▶ Page 19]
- 3 Insert the screw provided into the lug of the mount and secure the device to prevent it from being lifted off [XX Z2 (Pozidrive) / m 2 Nm] [See figure 12] [▶ Page 18].

NOTE: Alternatively: At this point, the screw described above can be replaced by a special screw as anti-theft protection.

» Device is installed. Proceed with the electrical installation.



Property damage as a result of condensation

During pre-assembly of the devices, moisture can penetrate into the interior via the DC plug connectors and the dust-protected threaded connections. The resulting condensate can cause damage to the device during installation and start-up.

- ✓ Keep the device closed during pre-assembly and do not open the connection area until you perform installation.
- $\rightarrow\,$ Seal off any plug-in connections and screw fittings using sealing covers.
- > Prior to installation, check the inner area for condensation and if necessary, allow it to dry sufficiently before installation.
- > Immediately remove any moisture from the housing.



7 Installation

7.1 General information

\Lambda DANGER


Lethal voltages are still present in the connections and cables of the device even after the device has been switched off and disconnected!

Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched.

- ightarrow The device must be mounted in a fixed position before being connected electrically.
- > Comply with all safety regulations and current technical connection specifications of the responsible power supply company.
- > The device is only permitted to be opened or serviced by a qualified electrician.
- > Switch off the grid voltage by turning off the external circuit breakers.
- > Check that all AC and DC cables are completely free of current using a clip-on ammeter.
- > Do not touch the cables and/or terminals/busbars when switching the device on and off.
- > Keep the device closed when in operation.

7.2 Surveying the connection area

The connection for the AC supply is located on the base plate in the lower right area. The DC input source is connected to the DC plugs and DC sockets on the base plate.

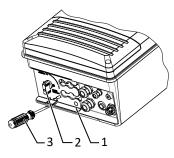

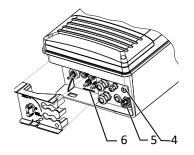


Fig. 16: Uncovering the DC connection

Fig. 17: Surveying the connection area

1	Cover to safeguard the DC connections	4	DC connector for PV generator
2	DC isolator switch	5	Housing grounding
3	Screwdriver	6	AC connection socket for grid connection

○ You have completed assembly.

1 Switch the DC isolator switches to "0" to remove the cover.

2 Carefully unlatch cover at the marked position using a screwdriver.

3 Remove cover and store for connection.

» Make the electrical connections.

NOTE

7.3 Making the electrical connection



Select conductor cross-section, safety type and safety value in accordance with the following basic conditions:

Country-specific installation standards; power rating of the device; cable length; type of cable installation; local temperature



7.3.1 Requirement for supply lines and fuse

DC-side	
Max. conductor cross-section	-
Max. cable cross-section (with wire sleeves)	2.5 - 6 mm ² (DC plug connector)
Recommended cable type	Solar cable
AC-side	
Max. conductor cross-section	4.0 mm ²
Max. cable cross-section (without wire sleeves)	2.5 - 6 mm²
Length of insulation to be stripped off	12 mm
Connection type	Phoenix AC connector
Fuse protection for installation provided by customer	max 25 A at 6 mm ²
Tightening torque	1 Nm
Interfaces	
Interface screw connections	Ethernet: M25, default RS485: M16, max. 1.5 mm
Cable diameter for cable fitting	(2x) 8 - 17 mm
RS485 connection type	Spring-type terminal
RS485 terminal cable cross-section	0.25 - 1.5 mm²
Ethernet connection type	RJ45
Torque for cable fitting	4 (M25) 1.5 (M16) Nm

Connecting the device to the power grid 7.4

7.4.1 Configuring the AC connection plug

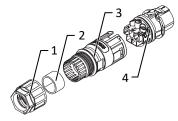
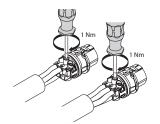


Fig. 18: AC connection plug



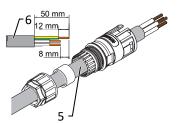


Fig. 19: Strip the insulation from the cable




Fig. 21: Tighten screws on the housing Fig. 22: Tighten the cable screw fitting

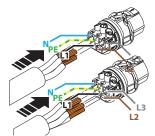


Fig. 20: Connect wires to the contact carrier

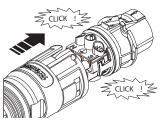


Fig. 23: Press contact carrier into the housing

Key				
1	Cable fitting	4	Contact carrier	
2	Seal	5	Line	
3	Housing	6	Cable lengths	
Ŭ	Connection area opened.			
1	Slide the cable fitting over the cable.			
2	Select seal according to cable diameter used.			



- 3 Slide the housing and seal over the cable.
- 4 Remove the insulation from the cable. [s1. 50 mm]
- 5 Shorten the wires N, L1, L2, L3 by the same ength in case of a 3-phase connection.

6 Strip the wires N, L1, L2, L3 in case of a 3-phase connection by 12 mm. 7 Flexible wires must be fitted with wire

sleeves in accordance with DIN 46228.

8 Insert wires into the contacts in accordance with the markings on the contact carrier.

9 Tighten screws on contact carrier. [XS_2/m 1 Nm]

10 Press contact carriers into the housing with an audible "click".

11 Secure the housing with a screwdriver [XW_29] and tighten the cable screw fitting. [XW_29/m 4 Nm]

- » Make the electrical connections.
- 7.4.2 Make the grid connection

Make the grid connection

 $\circlearrowright\,$ AC connection plug configured correctly.

1 Insert the AC connection plug into the device connector on the device.

- $\Rightarrow\,$ NOTE: The AC connection is secure when an audible click is heard.
- 2 Lay the cables correctly and in accordance with the following rules:
- Lay the cables around the device with a minimum clearance of 20 cm
- Never lay cables over semiconductors (cooling bodies)

- Excessive bending force may negatively impact the protection rating. Lay the cables with a bending radius of at least 4 times the cable diameter.

КАСС

Fig. 24: Engage the AC connector with the device connector

» The device is connected to the power grid.



NOTE

An AC-side disconnection unit must be provided during the final installation stage. This disconnecter mechanism must be installed so that it can be accessed at any time without obstruction.

NOTE



If a residual current circuit breaker is necessary due to the installation specification, a type A residual current circuit breaker must be used.

If the type A is used, the insulation threshold must be set to greater than/equal to (≥) 200kOhm in the "Parameters" menu Menu [See section 9.4.1» Page 36].

For questions regarding the appropriate type, please contact the installer or our KACO new energy customer service.

NOTE


When the line resistance is high, i.e. long cables on the grid side, the voltage at the grid terminals of the device will increase in feed-in mode. If the voltage exceeds the country-specific grid overvoltage limit value, the device switches off.

> Ensure that the cable cross-sections are sufficiently large or that the cable lengths are sufficiently short.



7.5 Connect PV generator to device

7.5.1 Configuring the DC plug connector

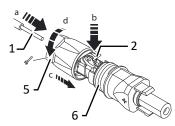




Fig. 26: Slide insert into sleeve




Fig. 27: Check fastening

Fig. 25: Insert wires

Key	1			
1	Wire for DC connection	5	Cable fitting	
2	Spring	6	Contact plug	
3	Insert	7	Coupling	
4	Sleeve			

[℃] Connection area opened.

 $\odot\,$ NOTE: Before proceeding with the isolation ensure that you do not cut any individual wires.

- 1 Strip the wires for DC connection [s1].
- 2 Insert isolated wires with twisted ends carefully up to the connection.

NOTE: Wire ends must be visible in the spring.

- 3 Close the spring so that the spring latches.
- 4 Slide insert into sleeve.
- 5 Secure and tighten the cover on the cable fitting [$\times W_{15}/$ \overrightarrow{m} 1.8 Nm]
- 6 Join insert with contact plug.
- 7 Check latch by lightly pulling on the coupling.
- » Make the electrical connections.

NOTE

The permissible bending radius of at least 4x the cable diameter should be observed during installation. Excessive bending force may negatively impact the protection rating.

- > All mechanical loads must be absorbed in front of the plug connection.
- > Rigid adaptations are not permitted on DC plug connectors.

7.5.2 Checking the PV generator for a ground fault

Risk of fatal injury due to electric shock!

\Lambda DANGER



Severe injury or death will result if the live connections are touched. When there is sunlight present on the PV generator, there is DC voltage on the open ends of the DC cables.

- > Only touch the PV generator cables on the insulation. Do not touch the exposed ends of the cables.
- > Avoid short circuits.
- > Do not connect any strings with a ground fault to the device.



NOTE

The threshold value from which the insulation monitor reports an error can be set in the "Parameters" menu.



Ensure that there is no ground fault

1 Measure the DC voltage between the protective earth (PE) and the positive cable of the PV generator.

- 2 Measure the DC voltage between the protective earth (PE) and the negative cable of the PV generator.
 - ⇒ If stable voltages can be measured, there is a ground fault in the DC generator or its wiring. The ratio between the measured voltages gives an indication as to the location of this fault.
- 3 Rectify any faults before taking further measurements.
- 4 Measure the electrical resistance between the protective earth (PE) and the positive cable of the PV generator.
- 5 Measure the electrical resistance between the protective earth (PE) and the negative cable of the PV generator.
 - ⇒ In addition, ensure that the PV generator has a total insulation resistance of more than 2.0 MOhm, since the device will not feed in if the insulation resistance is too low.
- 6 Rectify any faults before connecting the DC generator.
- 7.5.3 Recommended standard connection


\Lambda DANGER




Incorrect assignment of MPP trackers will seriously damage the device. Touching the live connections will result in severe injury or death!

- > Make sure that each MPP tracker can be disconnected from all poles.
- > Observe recommended standard connection.

Risk of fatal injury due to electric shock (electric arc)!





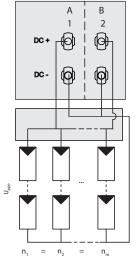


Fig. 28: Recommended standard connection *Fig. 29:* Parallel input with Y-adapter, short-circuits the unused MPP Tracker B

Fig. 30: One generator parallel on both MPP trackers

Possible wiring variants		
2 PV generators for each MPP tracker	1 PV generator for one tracker. The second tracker is deactivated	1 PV generator parallel on both MPP trackers



Possible wiring variants

ently operating MPP trackers (MPP trackers A and B).

The MPP voltages of the two DC If one of the MPP trackers (A or B) is not used, strings can be different. They are then it must be short-circuited, otherwise faults supplied by separate, independ- can occur during the self-test of the unit and the the same MPP voltage may be confeed-in operation is not guaranteed. The shortcircuiting of an MPP tracker does not result in the device being damaged.

The DC inputs can also be connected in parallel. In this case, only lines with nected in parallel. $(U_{n1}=U_{n2}=U_{nm})$.

The maximum permissible rated current (DC) doubles with parallel connection of both MPP trackers.

In case of a parallel input connection, MPP trackers A and B must be bridged. Parallel operation is automatically recognised by the inverter

		, , ,
Number of modules per string: n ₁ =n ₂	Number of modules per string: n ₁ =n _m	Number of modules per string: n ₁ =n ₂ =n _m
P _{max:} per string < 0.5 * max. recommen- ded PV generator power	P_{max} : Per string < 0.5*max. recommen- ded PV generator power P_{max} on the	P _{max} : max. recommended PV generator power
MPP tracker A+B together < max. re- commended PV generator power	MPP tracker used < max. power per MPP tracker	MPP tracker A+B together < max. re- commended PV generator power
I _{max:} Depending on PV generator		I _{max:} ≤2 * max. rated current (DC)

The input current per MPP tracker must not be exceed 11 A.

Tab. 3: Electrical data of the connection

7.5.4 Designing the PV generator

▲ CAUTION

Damage to components due to faulty configuration

In the expected temperature range of the PV generator, the values for the no-load-voltage and the short circuit current must never exceed the values for U_{dcmax} and I_{scmax} in accordance with the technical data.

> Observe limit values in accordance with the technical data.



NOTE

NOTE

Type and configuration of the PV modules.

Risk of fatal injury due to electric shock!

Connected PV modules must be dimensioned for the DC system voltage in accordance with IEC 61730 Class A, but at least for the value of the AC grid voltage



Sizing of the PV generator

The device is designed with a reserve of DC short-circuit current withstand capability. This allows oversizing of the connected PV generator. The absolute limit for the PV generator is the value of the maximum short circuit current (lsc max) and maximum open circuit voltage (Uoc max).

Connecting the PV generator 7.5.5

🗥 DANGER



Severe injury or death will result if the live connections are touched. When there is sunlight present on the

- PV generator, there is DC voltage on the open ends of the DC cables.
 - > Only touch the PV generator cables on the insulation. Do not touch the exposed ends of the cables.
 - > Avoid short circuits.
 - > Do not connect any strings with a ground fault to the device.



Damage to the PV generator in case of faulty configuration of the DC connector.

A faulty configuration of the DC connector (polarity +/-) causes equipment damage in the DC connection if it is connected permanently.

- > Please check polarity (+/-) of the DC connector before connecting the DC generator.
- > Before using the solar modules, check the vendor's calculated voltage values against those actually measured. The DC voltage of the PV system must not exceed the maximum no-load voltage at any time.

Connecting the PV generator

- DC plug connector configured and PV generator checked to ensure there is no ground fault.
- 1 Remove protective caps from the required DC connection plugs on the underside of the device.
- 2 Connect the the DC plug connectors to the DC positive and DC negative connectors in pairs.
- » The device is connected to the PV generator.

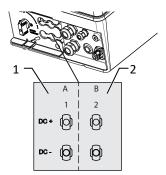


Fig. 31: Connection for DC positive and DC negative

- 1 DC-connection to MPP tracker A
- 2 DC-connection to MPP tracker B

7.6 Creating equipotential bonding



NOTE

Depending on the local installation specifications, it may be necessary to earth the device with a second ground connection. To this end, the threaded bolt on the underside of the device can be used.

- $\circlearrowright\,$ The device has been installed on the mount.
- 1 Strip the insulation from the equipotential bonding cable.
- 2 Furnish the stripped cable with an M4 ring cable lug.
- 3 Lay the equipotential bonding cable onto the grounding point and attach with the M4 x 10 bolt and lock washer provided [\times W_T30/ \cancel{m} 2.2 Nm].
- 4 Check that the connected cable is fitted securely.
- » The housing is included in the equipotential bonding.

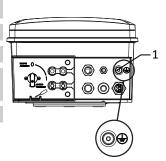


Fig. 32: Additional grounding point

1 Earthing bolt



7.7 Connecting the interfaces

7.7.1 Overview

\Lambda DANGER



Severe injury or death may result from improper use of the interface connections and failure to observe protection class III.

> The SELV circuits (SELV: safety extra low voltage) can only be connected to other SELV circuits with protection class III.

▲ CAUTION

Damage to the device from electrostatic discharge

Components inside the device can be damaged beyond repair by static discharge.

> Note the ESD protective measures.

Risk of fatal injury due to electric shock!

> Earth yourself before touching a component by touching a grounded object.

All interfaces are located on the communication circuit board (HMI board) inside the housing.

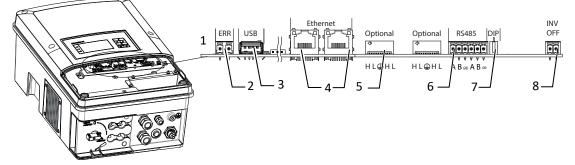


Fig. 33: Communication circuit board (HMI board)

1	Communication circuit board	5	Optional connection of extension module (e.g. for ripple control receiver, SPI)
2	ERR connection for external grid protection com- ponent (fault signal relay)	6	RS485 Bus
3	USB socket	7	DIP switch for terminal resistance
4	Ethernet port	8	INV OFF - connection for remote controls -2 V (+/- 20%) / 1 A (at least 15 mA)

7.7.2 Insert and lay the cables

Insert the interface cables

- 1 Unfasten and remove the cover on the cable fitting [W_29/W_20].
- 2 Remove the sealing insert.
- 3 Pass the connection cable through the cover of the cable fitting and the sealing insert.
- 4 Insert the sealing insert into the cable fitting.
- 5 Feed the connection cables into the connection area.
- » Proceed with the connection.



Fig. 34: Inserting the interface cable

- 1 Cable fitting for pass the Ethernet cable
- 2 Cable fitting for pass the signal cable



7.7.3 Ethernet connection



NOTE

The connection plug of an RJ45 cable is larger than the opening of an M25 cable fitting when it is installed. For this reason, remove the sealing insert before installation and thread the Ethernet cable outside of the cable fitting through the sealing insert.



NOTE

Use a suitable category 5 network cable. The maximum length of a network segment is 100 m. Ensure that the cable is correctly assigned. The Ethernet connection of the device supports auto-sensing. You can use both crossed and 1:1 protectively-wired Ethernet connection cables.

Connecting the device to the network

- ${\ensuremath{\mathbb O}}$ Connect the Ethernet cable to the device.
- 1 Connect the Ethernet cable to the network or a computer.
- 2 Configure the Ethernet settings and the web server in the Settings menu.

Connecting the Ethernet cable

 \bigcirc Connecting cable inside the device.

- 1 Plug in an Ethernet cable at one of the two Ethernet ports on the communication circuit board.
- 2 Check that the connecting cable is fitted securely.
- 3 Tighten the cable fittings [XW_29 / ₼ 4 Nm]
- » Connect additional signal cables.

7.7.4 Connecting the RS485 bus




Fig. 35: RS485 interface wiring diagram

1	Inverter, terminal unit	4 Communication
2	Inverter	5 Power supply
3	Data monitoring unit	
Prop	erties of the RS485 data line	
Maxi	mum length of the RS485 bus line	Max. 1200 m
		This length can be reached only under optimum conditions Cable lengths exceeding 500m generally require a repeater or a hub.
Maxi	mum number of connected bus devices	99 devices + 1 data monitoring unit
Data	line	Twisted, shielded.
Recommendation		Li2YCYv (twisted pair) black for laying cable outside and in the ground, 2 x 2 x 0.5 mm ²
		Li2YCY (twisted pair) grey for dry and damp indoor spaces, x 2 x 0.5 mm^2



- Ζ
- To prevent interference during data transmission:
 Observe the wire pairing when connecting DATA+ and DATA-.
 Do not lay RS485 bus lines in the vicinity of live DC/AC cables.
- 1 Undo the cable fitting [XW_20]
- 2 Thread the connection cables through the cable fitting.
- 3 Fit the ferrite clip on the door beam around the RS485 bus line using a cable tie.
- 4 Lay the connection cable correctly in the lower AC supply area and loosely fasten it using the cable ties provided.
- 5 Open and close the door completely to check that the connection cable is not subject to tensile or compressive forces.
- 6 To connect the shield, strip the RS485 data cable from the position of the shield terminal to the wire mesh (approx. 20 mm).
- 7 Clip the stripped RS485 data cable into the shield terminal.
- 8 Connect the connection cables to the corresponding connection terminals.
- 9 The following must be connected to all inverters and to the data monitor unit in the same way:
 - Wire A (-) to wire A (-) and wire B (+) to wire B (+)
 - GND to GND

10 Secure cable ties.

11 Tighten the cable fittings [XW_20 / 🛋 1.5 Nm]

 \circlearrowright Check whether one of the devices represents the terminal unit.

Only activate the terminating resistor on the communication circuit board of the terminal unit using the DIP switch.

» RS485 connection made. Lay signal cable correctly.

7.7.5 Connecting external grid protection components

The contact is designed as an N/O contact and is labelled "ERR" or "Relay" on the circuit board. []

Maxim	um contact load
DC	30 V / 1 A

AC 250 V / 1 A

○ Connection area cover open.

- 1 Loosen the cable fitting to pass the signal cable through [\times W_20]
- 2 Thread the connection cables through the cable fitting.
- 3 Attach the connection cables to the terminals.

4 Tighten the cable fitting [XW_20 / 🖬 1.5 Nm]

7.7.6 Inverter Off connection



NOTE

The digital input of the device is intended for connection of a Powador-protect. When using devices from other manufacturers or in combination with KACO inverters, interface switches as a minimum must be used for shutting down devices from other manufacturers.




Fig. 36: Assignment of twisted-pair wires



Connect Powador-protect

- \bigcirc The cable to the external grid protection device is available on the device.
- \circlearrowright Cover of the device has been opened.
- 1 Undo the cable fittings [XW_20]
- 2 Pass the connection cable through the cable fittings.
- 3 Connect wire A (+) to the terminal marked "INV OFF+" on the first device via the "DO1" terminal of the protective device.
- 4 Connect wire B (-) to the terminal marked "INV OFF-" on the first device via the "GND" terminal of the protective device.
- 5 Connect the other devices to one another as follows: - wire A (+) to wire A (+) and wire B (-) to wire B (-).
- 6 Tighten the cable fitting [XW_20 / 🛋 1.5 Nm]
- 7 After commissioning: Configure the external Overvoltage protection Powador-protect in the menu entry Properties / Functions Properties / functions.

7.8 Sealing the connection area

- \circlearrowright Grid connection is prepared.
- 1 Feed the cables into the cover.

2 Place the cover at the marked position and click into place.

- 3 Set the DC isolator switch to "1".
- » Put the device into operation.



Fig. 37: Connecting the device to Powador-protect




Fig. 38: Close the connection cover



8 Commissioning

8.1 Requirements

DANGER



Lethal voltages are still present in the connections and cables of the device even after the device has been switched off and disconnected!

- Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched. > The device is only permitted to be commissioned by a qualified professional.
 - > Unauthorised persons must be kept away from the device.

8.2 Preconditions relating to standards

Attachment of safety label in accordance with UTE C15-712-1

The code of practice UTE C15-712-1 requires that, upon connection to the French low-voltage distribution network, a safety sticker showing a warning to isolate both power sources when working on the device must be attached to each device.

Attach the provided safety sticker to the outside of the device housing where it is clearly visible.



Fig. 39: Safety label UTE C15-712-1

Self-test function

The system protection interface (SPI) in the device is implemented in accordance with the Italian guideline CEI 0-21 8.6.2. This applies to systems with a nominal power of up to 6 kVA. The self-test function described below is one of the SPI requirements.

Accessibility

The self-test menu dialogue "self-test" for starting the self-test function is part of the parameter menu level Italy CEI 0-21 and is not password protected. The self-test is accessible as soon as the inverter starts up feed-in mode. Accordingly, the self-test menu dialogue is not visible if the inverter is disconnection from the grid. A corresponding remote control command for starting the self-test function via the RS485 interface is also available.

Test sequence

The self-test checks the system protection interface against the requirements in SPI_Uo S1 and S2, SPI_Uu S1 and S2, SPI_fu S1 and S2, SPI_fo S1 and S2 (see "Standard requirements in accordance with CEI 021"). The self-test function operates in the manner detailed in the sequence diagram attached. The duration of the self-test is 250 ms, the increment is 1 V in the case of voltage shutdown thresholds and 0.01 Hz in the case of frequency shutdown thresholds. The tripping threshold value to be tested is moved to the current measurement value (grid voltage or frequency) by increasing or decreasing the relevant tripping level.

There is no limit on the duration of a single self-test step. The self-test can be aborted at any time by pressing the ESC key.

Result

During the self-test, the device generates a test report on the RS485 interface at the same time (baud rate 9600). The results of the self-test are shown automatically on the display of the device once the test has been completed or the user has cancelled the test. The user can close the results display by pressing any key. The results display is closed automatically after 10 minutes. The self-test report contains the nominal tripping values, the actual tripping values and the corresponding tripping times.

9 Configuration and operation

9.1 Initial start-up

When started for the first time, the device displays the configuration assistant. It takes you through the settings necessary for the initial start-up.



NOTE

After configuration is completed, the configuration assistant does not appear again when the device is restarted. You can then change the country setting only in the password-protected parameter menu. The other settings can still be changed in the Settings menu.

1 In order to select a setting, press the ${\tt Up}$ and ${\tt Down}$ buttons.

2 To select the next menu option, press the Enter button.

3 To return to the most recently selected menu option, press the ESC button.

4 Set the required settings.

5 In the last menu option, press the Enter button.

Configuration assistant

1 Select the menu language.

2 Select the country of operation with grid type.

3 Set the date and time.

4 To store the set operator country and grid type permanently, confirm with " ${\tt Yes}".$

» You have completed the initial configuration. The device begins operation.

9.2 Controls

The device has a backlit LCD display as well as three status LEDs. The device is operated using 6 buttons.

The 3 LEDs on the device control panel show the different operating states. The LEDs can display the following states:

LED illuminated	-	LED flashing	LED not illuminated
Operating status	LED Icon	Display	Description
Start	•		The green "Operation" LED is on when the AC voltage is present, independent of the DC voltage.
Feed-in start		Power fed into the grid or	The green "Operating" LED is lit.
		measured values	The green "Feed-in" LED is lit after the country-specific waiting period ³ .
	\bullet A		Ready for grid operation.
			The interface switch engages audibly.
Feed-in operation		Power fed into the grid or	The green "Operating" LED is lit.
		measured values	The green "Feed-in" LED is lit.
			The "Feed-in" icon appears on the LD display.
			The device feeds into the grid.

*) The waiting period ensures that the generator voltage continuously remains above the power delivery limit of 200 V. For country-specific waiting periods see our website.



Operating status	LED	lcon	Display	Description
Feed-in operation with re-		()	Power fed into the grid	The green "Operating" LED is lit.
duced power			or measured values	The green LED "Feed" is flashing because one of the modes: internal power reduc- tion, external power reduction, idle power request or standalone mode is active.
				The device feeds into the grid.
				The interface switch engages audibly.
Non-grid feed mode		Ċ	Status message	The display shows the corresponding mes- sage.
		$\overline{\Lambda}$		
Fault	۲		Fault message	The display shows the corresponding error message.
				The red "Fault" LED is lit.

Control buttons

The device is operated using the 4-way button and the Enter and ESC buttons.

Opening the menu

\circlearrowright The device is in operation and the LCD is showing the desktop.	Q	⊳		
Press the right arrow button.	7	7		
» The menu moves over the desktop from left to right.	ESC	4		
Displaying the daily output				
\circlearrowright The device is in operation and the LCD is showing the desktop.	⊲	⊳		
Press the down arrow button.				
» The LCD displays the daily yield in a diagram.				
The metric and the deviction of the second built and				

To return to the desktop, press any button.

Device menu

Selecting a menu option			
\circlearrowright You have left the desktop. The device displays the menu.			
Ise the up button or down button to navigate.			

Opening a menu item or a setting

The second secon

ESC	4
	2
δ	Δ
7	7
ESC	T


Λ



Navigate to the next higher menu level/discard change	Δ
☞ Use the left arrow button or the ESC button.	
Selecting an option	Δ
Sethe right and left arrow buttons.	
	ESC LA
Changing an option/the value of an input field	Δ
Changing an option/the value of an input field To Use the up and down arrow buttons.	
The up and down arrow buttons.	

9.3 User interface

After being switched on and after initial commissioning is complete, the device displays the start screen (the desktop). If you are in the menu and do not touch any control buttons for 2 minutes, the device returns to the start screen.

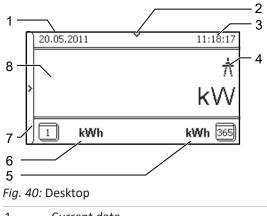

1	Current date	5	Annual yield
2	Status bar	6	Daily yield
3	Current time	7	Menu indicator
4	Feed-in indicator	8	Current power

Graphical display

The graphical display shows measured values and data and allows the configuration of the device using a graphical menu. In normal operation, the backlighting is switched off. As soon as you press one of the control buttons, the backlighting is activated. If no button is pressed for an adjustable period of time, the backlighting switches off again. You can also activate or disable the backlighting permanently.





NOTE

Depending on the tolerances of the measuring elements, the measured and displayed values are not always the actual values. However, the measuring elements ensure maximum solar yield. Due to these tolerances, the daily yields shown on the display/Monitor may deviate from the values on the grid operator's feed-in meter by up to 15%.



NOTE

Calculating efficiency by measuring the current and voltage values can lead to misleading results due to the tolerances of the measurement devices. The purpose of these measured values is to monitor the basic operation of the system.

9.4 Menu structure

Display on the LCD

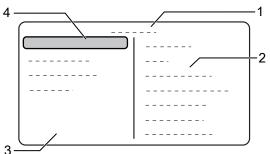


Fig. 41: Main menu

1	Selected menu option	3	Menu options in the active menu level
2	Name of the active menu level	4	Menu options of the next lower menu level



NOTE

The menu options displayed on screen are dependent on the country and network settings, and may vary according to the type of device. Functions restricted to one or more countries are labelled with country codes in accordance with ISO 3166-1.

Symbols used

1 2 3 4	Menu level (0,1,2,3)	Password-protected menu (password can be re- quested from KACO customer service)
	Display	Submenu
	Option menu	Option box
		Setting range

9.4.1 Menu

Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
	Desktop	Press Right arrow button.
	Measured values	Open the menu: Press the right arrow button or the OK button.
	আফাৰ্টনৰ Generator	Displays the DC-side voltage, amperage and power.
	ININA Grid	Displays the AC-side voltage, amperage and power.
	DEFER Power control	Displays the current value of the external power limitation by the grid operator.



Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
	ाखान cos-phi	\bigcirc Displays the reactive power factor $\cos \phi$ of the node.
	াৰ্টাৰ Unit temperature	Displays the temperature inside the housing.
	াৰ্টটাৰ Yield counter	Displays the yield in kWh.
		Reset the counter using the RESET button.
	ায়াৰ Yield today	Displays the cumulative yield for the current day.
	াৰ্টাৰ Total yield	Displays the total yield up to now.
	াৰ্টটাৰ CO2 savings	\bigcirc Displays the calculated CO ₂ savings (in kg).
	াৰ্টটাৰ Oper. hrs cntr	OVE: Displays the operating time in hours.
		The set the counter using the RESET button.
	াটাটাৰ Oper. time today	O Displays the duration of operation on today's date.
	ায়াৰ Total oper. time	Displays the total operating time
	চাটান Log data view	NOTE: Measurement data can be transferred hierarchically to a con- nected USB stick by individual selection.
		Open the menu: Press the Right arrow button or Enter button.
	ায়ানৰ Day display	O NOTE: Displays the recorded operating data graphically.
		Select the measured value to be displayed.
		Supported measured values:
		1. Grid power P(grid)
		2. DC power of the string P
		3. DC voltage of the string U
		1 Select a day.
		2 Press the Enter button.
		\Rightarrow The display shows the selected data.
		3 Press any button to return to the previous menu.
	ায়ঃৰ Month display	Displays the recorded operating data graphically.
		1 Select a month.
		2 Press the Enter button.
		» The display shows the selected data.
		Press any button to return to the previous menu.
	TETH Year display	O Displays the recorded operating data graphically.
		1 Select a year.
		2 Press the Enter button.
		\Rightarrow The display shows the selected data.
		» Press any button to return to the previous menu.
	THEM CSV log data	Open the menu: Press the Right arrow button or Enter button.
	ায়ক্তৰ Decimal separator	Select decimal sign for export of saved operating data.



Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
	THE Save to USB	NOTE: Opportunity to export the operating data to a connected USB storage device.
		\circlearrowright You have connected a USB storage device to the device.
		1 Select the data to be exported (year, month or day).
		2 Press the Enter button.
		 » The device writes the data to a connected USB storage device.
	THEME Settings	Open the menu: Press the Right arrow button or Enter button.
	চ্চাচন Language	Select the required language for the user interface.
	DITE Define total yield	NOTE: You can set the total yield to any value, for example, when you have received a replacement unit and want to continue the recording from the present value.
		 <pre>@ Select the Save button and confirm with the Enter button.</pre>
	Interface	NOTE: The address must not be the same as the address of another device or a Powador-proLOG device.
		Assign a unique RS485 bus address to the device.
	DEFINE Priwatt	Open the menu: Press the Right arrow button or Enter button.
	TETE Activation mode	NOTE: Re-activation depends on the operating mode selected and on the activation conditions.
		 Activate function for a cycle
	TETE Monitoring time	Set time span during which the power threshold must be exceeded without interruption.
	TETE Power threshold	Set power threshold from which the monitoring time up to activatio begins.
	াদ্রার Operation mode	1 Power-dependent: the function remains active until below the set power threshold.
		 2 Time-dependent: The function is active independent of the sunlight for the set operation time.
	াদ্রান Operation time	NOTE: The menu option is only available in "Time-dependent" opera- tion mode.
		 After connection, the function is active for the set operation time.
	DIFFICE Quick start	Reduce the waiting times during the self-test by pressing theActivate button.
	চাৰে Logging interval	Specify the time period between 2 log data recordings.
	চ্চাচন Log data backup	NOTE: The device supports the backing up of all recorded yield data to a connected USB storage device.
		Activate or disable log data backup.
	INZERIA Display	1 Configure the contrast setting for the display.
		2 Set the length of time without user input after which the backlight- ing of the LCD switches off.
		 3 Alternatively: Permanently activate or disable the backlighting by selecting "On" or "Off".



Country- spec. Set- tings	Men Display/ u Setting level		Action in this menu/meaning
	INTERNA Date & time		NOTE: For self-diagnostics, the device performs a restart on a daily basis at 0:00 hours. To avoid having a restart occur during feed-in op- eration and to always obtain reliable log data, ensure that the time is correctly set.
			Set the date and time.
	International Network		Open the menu: Press the Right arrow button or Enter but- ton.
	ਾਡਮਰ DHCP ਛ≣ On / Off		NOTE: The "IP address", "Subnet mask", "Gateway" and "DNS-Server" menu options are only displayed with DHCP disabled.
	,		Activate or deactivate DHCP.
			On: Once the DHCP server becomes available, the IP address, subnet mask, gateway and DNS server are automatically applied and the afore- mentioned menu options are hidden.
			Off: Apply settings manually.
	IP address		Allocate a unique IPv4 address in the network.
	DEFINE IP address		NOTE: The "IP address", "Subnet masks", "Gateway" and "DNS server" menu items
			are only displayed with DHCP disabled.
	INIBIA Subnet mask		Assign a subnet mask.
	INDENE Gateway		Enter IPv4 address of the gateway.
	DNS server		Enter IPv4 address of DNS server.
	Table Web server		Open the menu: Press the Right arrow button or Enter button.
	াত্ৰাৰ Operation mode		Activate or disable the integrated web server.
	াইটেৰ Port		Set the port at which the web server can be reached.
	াথিয়াৰ Remote config		If necessary, activate the remote configuration.
	⊟≣ On / Off		
	াটা Remote update		If necessary, activate the remote update.
	B≣ On / Off		
	Portal Connection test		\odot Your IT infrastructure must be adequately protected.
	B≣ Off Meteocontrol User-defined 1-4:		Select operating mode.
			Off: The connection to the portal is deactivated.
			Meteocontrol: The device attempts to connect to the Webportal blue- planet web of meteocontrol.
			User defined 1-4: The device attempts to log on via a user-defined portal that was set up by way of remote access.
	INDEM Modbus TCP		Activate/disable function.
	Dende Activation		NOTE: The menu options "Write access" and "Port" are only displayed with TCP activated.
			1 Activate Modbus TCP.
	IN Write access		Allow Modbus TCP write access.
	TEN Port		൙ Set network port.
	াত্ৰাৰ Connection status	\bigcirc	Indicates the status of the network connection.

KACO blueplanet 3.0TL3 KACO blueplanet 4.0TL3 KACO blueplanet 5.0TL3 KACO blueplanet 6.5TL3 KACO blueplanet 7.5 TL3 KACO blueplanet 8.6TL3 KACO blueplanet 9.0TL3 KACO blueplanet 10.0TL3



Country- spec. Set-	Men Display/ u Setting level	Action in this menu/meaning
tings	never never Parameters	Press the Right arrow button or Enter button.
		NOTE: The device does not display the "Parameters" menu in the standard configuration. To display the Parameters menu:
		1 Open the menu.
		2 Simultaneously hold down the Up and Down buttons for several seconds.
	TERM Password protection	NOTE: Opportunity to set password protection.
	B≣ Status On/Off	Selecting "yes" initiates a password request for the entire menu item: Parameters.
	Dese Country	NOTE: This option influences the country-specific operating settings of the device. Please consult KACO service for further information.
		1 Enter the four-digit password using the 4-way button. The password is unit-specific.
		2 Confirm the entry with the Enter button.
		3 Set the desired country setting.
CH, DE, ES, FR, GB, GR, IT, JO, JP, LU, TH, ZA	জ্ঞান Grid type/guideline	Select the grid type for the device's installation location.
UD	DIE Nominal grid voltage	Set the specified grid voltage for the site where the unit is used (please contact KACO Service)
	DEFE Grid parameter	Open the menu: Press the Right arrow button or Enter button.
	, Dever Overvoltage shutd. Average value over ten minutes	• 1 Specify the shutdown threshold for overvoltage shutdown.
FR-OLD, FR-VFR13, FR-VFR14,		⇒ The 10-minute average for the measured voltage as per EN50160 is used.
IE, JP, NL, PL, PT, TR, TW, UD		2 Set period from occurrence of the fault to shutdown of the device.
BE CH-NS	미리카르 Overvoltage shutd. Av-	1 Activate or disable password protection.
CY DE-NS DK LU-NS	erage value over ten minutes Password pro-	2 Specify the shutdown threshold for overvoltage shutdown.
DK LO-N3	tection	➡ The 10-minute average for the measured voltage as per EN50160 is used.
		3 Set period from occurrence of the fault to shutdown of the device.
FR-VFR13 FR-VFR14	where Voltage drop	NOTE: The voltage drop between the device and the feed-in meter is added to the limit value that was set for grid shutdown according to EN 50160. The limit value can be set to 0-11 Volt increments.
JP-50HZ JP-60HZ UD		Specify the shutdown value for the voltage drop (0-11 Volt).
BE CH-NS CY DE-NS DK LU-NS	INTE Switch-off volt.	NOTE: The device is equipped with redundant 3-phase monitoring. If the grid voltage exceeds or drops below the configured values, the device switches off. The minimum switch-off threshold can be set in 1 Volt increments.
		1 Configure the switch-off values for undervoltage and overvoltage.
		2 Where applicable, set period from occurrence of the fault to shut- down of the device.



Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
AT, AU, BG, CH—MS,	DEFE Overvoltage shutd.	• 1 Specify the shutdown threshold for fast and slow overvoltage shut- down.
CZ, DE-MS, ES, FR, GB, GR, HR, HU, IE, IL, IN, IT, JO, JP, KR, NL,PL, PT, RO, TH, TR,TW, DU, ZA		2 Set period from occurrence of the fault to shutdown of the device.
See Over- voltage shutd.	চ্চাফা Undervoltage shutd.	Specify the shutdown thresholds for fast and slow overvoltage shut- down.
	চ্চান্ত Overfreq. shutd.	2 Set period from occurrence of the fault to shutdown of the device.
Page 000	DIFE Underfreq. shutd.	Set limit value for the slow and fast underfrequency shutdown.
	■ Grid parameter (fur- ther information)	Image: Constant of the second secon
		If the value U< (slow undervoltage shutdown) is set to a value which is greater than the value of U_{con} , $_{min}$ (minimum restart voltage) using the LC display, then the value of U_{con} , $_{min}$ is automatically set to the value of U>.
		If the value U> (slow overvoltage shutdown) is set to a value which is smaller than the value of U_{con} , max_{max} (maximum restart voltage) using the LC display, then the value of U_{con} , max_{max} is automatically set to the value of U>.
		If the value f< (slow underfrequency shutdown) is set to a value which is greater than the value of $f_{con, \min}$ (minimum restart frequency) using the LC display, then the value of $f_{con, \min}$ is automatically set to the value of f<.
		If the value f> (slow overfrequency shutdown) is set to a value which is smaller than the value of $f_{con, max.}$ (maximum restart frequency) using the LC display, then the value of $f_{con, max.}$ is automatically set to the value of $f_{>}$.



Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
BE CH-NS CY DE-NS DK LU-NS	চ্চান্য Switch-off freq.	NOTE: The device continuously monitors the grid frequency. If the grid voltage exceeds or drops below the configured values, the device switches off.
		1 Set limit values for underfrequency and overfrequency in 0.1 Hz increments.
		2 Set period from occurrence of the fault to shutdown of the device.
	তালে Fault ride-through	NOTE: The device doesn't support dynamic grid stabilization (Fault Ride-Through).
	INAL DC starting volt.	The device begins feed-in as soon as this DC voltage is present.
		Image: Image of the starting voltage.
	াৰ্যায়ৰ DC connection	🔎 🖉 Select between automatic detection and manual setting.
		NOTE: Note the connection examples!
		Recommended standard connection [See section 7.5.3 Page 25]
	Dated Const. volt. ctrl.	NOTE: Option to disable the MPP seek mode in order to operate the device with a constant DC voltage.
		1 Activate or disable the constant voltage controller.
		2 Set value for constant voltage controller.
	needed Power limitation.	NOTE: The output power of the device can be set permanently to a lower value than the maximum output power by the power limitation. This may be necessary in order to limit the maximum power rating of the system at the grid connection point, upon the grid operator's request.
		NOTE: The value can be protected from the very first power limitation entry. After setting a limitation, the value can only be changed by en- tering a device-specific password.
		NOTE: Only the external power limitation can be adjusted on the device. The internal power limitation can only be set via the web interface.
		Configuration via web user interface [See section 9.4.2 Page 46]
	চাটান Power limitation. ex- ternal	NOTE: External power limitation is possible with the extension module (KACO accessories).
		1 Specify the activation status (on / off).
		2 Select the activation threshold (Active Low / Active High) from di- gital input 1, 2, 3 or 4 (only if activation status = on).
		3 Specify the power limitation stages (only if activation status = on) a.) Specify stage 0-3 b.) Specify stage 4-7 c.) Specify stage 8-11 d.) Spe- cify stage 12-15
		4 Confirm the entry with the Enter button.
	DITE Fault ride-through	NOTE: The device doesn't support dynamic grid stabilization (Fault Ride-Through).



Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
	ਸ਼ਾਸਤ Powador-protect ਛ≣ Auto On Off	NOTE: Configures the support for grid shutdown by a Powador-protect connected to the digital input of the device.
		 Auto/On: A Powador-protect is operating in the photovoltaic sys- tem and is connected to the device at the digital input/output.
		Set the operating mode for Powador-protect.
		Auto: The device automatically detects a Powador-protect integrated into the photovoltaic system.
		On: The digital signal of the Powador-protect must be present at the di- gital input of the device for the device to begin feed-in.
		Off: The device does not check whether a Powador-protect is integrated into the PV system.
	ত্রহার Iso.resistor	Set threshold value (in 1kOhm increments) at which the insulation monitor reports a fault.
	চালে Power reduction P(f)	NOTE: The unit supports the internal power factor correction after P(f).
		1 Open the menu: Press the Right arrow button or Enter button.
		Note: All the parameters are configurable here and via the WEB in- terface NOTE: . Configuration via web user interface [See sec- tion 9.4.2 Page 46]
Not for IL,	াণ্ডাৰ P(f) operation mode	NOTE: More detailed information can be found in
IT	B≣ Off Mode 1 Mode 2	Specify the operation mode.
	ाख्याः Threshold activated व्य⊈45 Hz – 70 Hz	Specify activation threshold (if mode 1 or mode 2 is active, this menu option is displayed permanently for IT and IL!)
		NOTE: The function is activated if the activation threshold is exceeded. In mode 2 this value also serves as a deactivation threshold.
	 Image: Threshold deactivated Image: Threshold deactivated Image: Min. 45 Hz - 61,5 Hz Image: Max. 45 Hz - 70 Hz 	NOTE: If the grid frequency is within the deactivation range for the duration of the deactivation time, then the function is deactivation ated.
	≈ Max. 45 Hz – 70 Hz	1 Specify deactivation threshold (if mode 1 or mode 2 is active, this menu option is displayed permanently for IT and IL!).
Not for IL, IT	Deactivation time	Specify time for power reduction (if mode 1 is active)
	াছচাৰ Gradient	Set gradient of power limitation function with increasing frequency in % / Hz. The percentage value is based on the rated frequency (if mode 1 or mode 2 is active, this menu option is displayed perman- ently for IT and IL!)
	Detern Intentional delay	Set the power limitation delay in seconds (if mode 1 or mode 2 is act- ive; this menu option is displayed permanently for IT and IL!).
	Deter Settling time	Set the power reduction delay in seconds (if mode 1 or mode 2 is act- ive; this menu option is displayed permanently for IT and IL!).
	Dense Outg. grad. & Fall. Outg. grad.	Specify output gradient increase and decrease in ⁰ / ₀₀ (per thousand).
	ਾਕਸਮਾ Deact. grad.	Specify deactivation gradient in ⁰ / ₀₀ (per thousand) /minute (if mode "1" or mode "2" is active. This menu option is displayed permanently for IT and IL!).



Country- spec. Set- tings	Men u level	Display/ Setting		Action in this menu/meaning
	1234	Fault ride-through		NOTE: The device supports dynamic grid stabilization (Fault Ride- Through).
				Further parameterisation is possible via the web interface
	<u>1</u> <u>H</u> 2 <u>H</u> 3 <u>H</u> 4	Reactive power		1 Open the menu: Press the Right arrow button or Enter button.
				2 Activating reactive power process: Select process a press the Enter button. The active process is highlighted.
	1-2-3-6	cos-phi const.		More detailed information about the procedure can be found at:
		≩ 1- 0.3		1 Reactive power control [See section 10.1 Page 55]
			_	2 Determine the specified displacement factor.
		差 Over-excited un- der-excited		If a power factor not equal to 1 is selected: Select the type of phase shift: under-excited (inductive load), over-excited (capacitive load).
	1234	Q constant 差 0 − 100%		More detailed information about the procedure can be found at:React- ive power control [See section 10.1▶ Page 55]
				Set the idle power Q (in %) to a fixed value.
		B≣Under-excited		Select the type of phase shift.
		over-excited		NOTE: Under-excited relates to inductive load, over-excited relates to capacitive load.
	11213.4	Settling time ≆ 1s – 120 s		Set the settling time in the event of an abrupt change in the reactive power target value (e.g. caused by a voltage jump). The transient re- sponse corresponds to a first-order filter (PT-1) with settling time = 5Tau.
	1234	Lock-in voltage 춡 23V – 287V		Set the voltage above which control is activated.
	1 2 3 4	Lock-out voltage 差 23V – 287V		Set the voltage below which control is deactivated.
	1234	Number of nodes 差 2 - 10		NOTE: The maximum number of configurable nodes depends on the selected grid type.
				Specify the number of nodes for the cos φ /(p/pn).
	11234	1st node 10th node □= Voltage Reactive power Excitation □=0-100%	0	Power factor for 1st ,10th node as a percentage of the maximum power.
		1-0.3	_	${}^{\ensuremath{arphi}}$ Specify the NOTE: cos ϕ of the node.
		Over-excited un-	_	If a reactive power not equal to 1 is selected: Select the type of phase shift.
	1234	Q(U) 10 nodes		Open the menu: Press the Right arrow button or Enter button.
				NOTE: More detailed information about the procedure can be found at: Reactive power control [See section 10.1 ▶ Page 55]
	TH2 H3 H4	Settling time ≋ 1s – 120 s		Set the settling time in the event of an abrupt change in the reactive power target value (e.g. caused by a voltage jump). The transient re- sponse corresponds to a first-order filter (PT-1) with settling time = 5Tau.



Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
	1-2-3-4	Lock-in power ╧ 0 − 100% S _{max}	Set the active power as % of rated power above which control is ac- tivated.
	1234	Lock-out power [⇒] 0-100% S _{max}	Set the active power as % of rated power below which control is de- activated.
	1-2-3-4	Lock-in time 差 0 s − 60 s	Set the length of time that the active power must remain below the lock-in power level before control is activated.
	1234	Lock-out time 差 0 s − 60 s	Set the length of time that the active power must remain below the lock-out power level before control is deactivated.
	1-2-3-4	Downtime	Set the intentional delay for the start of the Q(U) function.
		출 0 s − 10 s	NOTE: If the voltage switches from a characteristic curve section with Q=0 to a characteristic curve section with Q≠0 under active control, then the reactive power setting process is delayed by the set dead time. Once the dead time has expired, the control circuit is no longer subject to a delay and the set settling time determines the transient behaviour.
	1-2-3-6	Rise Outg. grad. & Fall. Outg. grad. ≣≣ increasing decreas- ing	NOTE: In addition to configuring the transient behaviour using the set- tling time corresponding to a first-order filter, the reactive power set- ting can be determined by a maximum gradient - maximum change in the reactive power per time period.
		差1 %-60000 %/min	Maximum change in the reactive power %Smax/min in the event of a change to over-excited mode.
		≊1 %-60000 %/min	 Maximum change in the reactive power %Smax/min in the event of a change to under-excited mode.
	1234	Min. cos-phi Q1 - Min. cos-phi Q4	NOTE: In the event of a significant voltage deviation, the maximum reactive power adjustment range can be limited by a minimum cos φ in order to prevent an excessive reactive power supply and, as a result, a significant reduction in the maximum active power that can be fed in.
			${}^{\mathscr{T}}$ Enter the minimum cos ϕ factor for quadrants 1 and 4.
	1 2 3 4	Priority mode	Set priority for reactive power – Q or active power – P.
		출 Q priority P priority	NOTE: When it comes to P priority, the reactive power adjustment range is limited subject to the active power that is currently available and fed in.
	1234	Active curve	Select active curve.
		≩ 1 - 4	NOTE: Up to 4 characteristic curves can be configured independently and one of them can be activated for regulation each time.
	1234	Reset the curve	Reset active curve to the default setting.
	1-2-3-4	Number of nodes ≩ 2 - 10	NOTE: The maximum number of configurable nodes depends on the selected grid type.
			 Specify the number of nodes for the Q(U) characteristic curve.
	1-2-3-4	Exten. standalone grid	NOTE: Grid operators require shutdown of the device with standalone grid detection.
			 Further parameterisation is possible via the web interface.



Country- spec. Set- tings	Men Display/ u Setting level	Action in this menu/meaning
BE CH-NS	Instant Line error	NOTE: Display of grid faults.
CY DE-NS DK JP-50HZ JP-60HZ LU-NS TW UD	2	To show the last 5 grid fault messages, press the Show button.
	অথ্যানৰ Advanced features	Further parameterisation is possible via the web interface
	Information	Open the menu: Press the right arrow button or the OK button.
	THEMA Inv. type	Displays the type designation of the device. If feed-in power is actively limited: display maximum power in kW.
	THEFE Display country	Displays the selected country setting. Optional: Displays the grid type if a grid type has been selected.
	ाये Vendor	The display shows information about the device manufacturer.

9.4.2 Configuration via web user interface



NOTE

In addition to the parameters in the chapterMenu [See section 9.4.1 Page 36], additional parameters are available and accessible via the web user interface. To do so, enable Remote config in Network under Webserver and enter the device IP address into your browser.

Delive Operating settings	NOTE: Options for advanced setting of the operating parameters.
THEM DC starting volt.	The device begins feed-in as soon as this DC voltage is present.
	☞ Set the starting voltage.
DELETE Const. volt. ctrl.	NOTE: Option to disable the MPP seek mode in order to operate the device with a constant DC voltage.
	1 Activate or disable the constant voltage controller.
	2 Set value for constant voltage controller.
চাৰনাৰ Iso.resistor	Set threshold value (in 1kOhm increments) at which the insulation monitor reports a fault.
াত্ৰাৰ 3-phase monitoring	NOTE: The device is equipped with redundant 3-phase monitoring. I
B≣ On / Off	the grid voltage exceeds or drops below the configured values, the device switches off. The minimum switch-off threshold can be set in 1 V increments.
	Activate or disable monitoring.
াত্ৰনৰ FRT (Fault Ride Through)	NOTE: The device supports dynamic grid stabilization (Fault Ride- Through).
ायाः d ⊟≡ Operation mode –	Select a control process.
On Off	On: Activates dynamic grid support using dynamic reactive current.
	Off: Deactivates dynamic grid support using dynamic reactive current Dynamic grid support remains active on account of immunity to inter ference.
Setting Manual Pre- defined zero current	Select a control process.
Priority – Reactive cur- rent limitation Active current priority	Select a control process.



⊺}2 ∤⊒∤4	Constant k positive se- quence dip &		Set amplification factor k for the pos. sequence for drop and increase in the grid voltage.
	Constant k positive se- quence swell		
	🍄 k 0 – 10 💿 2		
	Constant K negative se- quence dip		Set amplification factor k for the neg. sequence for drop and increase in the grid voltage.
	Constant k negative se- quence swell		
	✿ k 0 – 10 [®] 2		
1234	Dead band		Set dead band in %.
	🍄 0 - 100 [% Uref] 💿 10.0		
□\2 \3\4	Dynamic reactive cur- rent only		NOTE: With FRT mode activated, the pre-fault reactive current can be added.
	B≣Off On		If necessary, activate pre-fault reactive current.
1121314	Dead band mode		Select dead band mode for the active control process.
	B≣Mode 1 Mode 2		
1234	Reference voltage		Set reference voltage for the active control process.
	≩ U< - U>		
112/3/4	Minimum operating		Set voltage range for the active control process.
	voltage		
	\$ 45 – 125.0 [% Unom] &		
	Maximum operating		
	voltage		
	🍄45 – xxx [% Unom]		
	Password protection		
	⊟ ≣ Status		
1 12 1914	Zero current under- voltage threshold		Set the voltage threshold for zero current mode.
	Zero current over- voltage threshold		
	✿0 – 184 V / 253 – 340 V		
⊺\2 {3}€	Reactive current limita- tion		Set the reactive power limitation.
	🍄 0 – 100 % [% Imax]		
12.3-4	Minimum support time		Set the minimum support time.
	🍄 1000 – 15000 ms		
1121314	Connection cond.		NOTE: The device checks the grid voltage and grid frequency. The grid feed-in mode begins if the measurements are within the set ranges.
		\square	Set minimum and maximum values for connection.
1(2)(3)(4)	Min. conn. voltage after grid failure		Set min. and max. switch-on voltage after grid monitoring.
	Max conn. voltage after grid failure		



		 lower value than the maximum output power by the internal power limitation. This may be necessary in order to limit the maximum power rating of the system at the grid connection point, upon the g
	 Overvoltage averaging Counter / inverter voltage drop Power Limitation 	 Set the voltage. NOTE: The output power of the device can be set permanently to a
1 2 3 4	Average value over ten minutes	Set the voltage via averaging.
	logged-on user New password for the "user" access Confirm new password	
	B = Password of the	3 Confirm and apply new password.
	"user"	2 Enter a new, secure password.
[इ ∦2 ∤इ⊬ब]	staller" access Con- firm new password Change password for	1 Enter old password.
	logged-on user New password for the "in-	
	B= Password of the	 2 Enter a new, secure password.3 Confirm and apply new password.
1 2 3 4	Change password for "installer"	1 Enter old password.
	ROCOF threshold stage 2 time 🌣 0.10 – 5.00 [s]	
	ROCOF threshold stage 1 time $20.10 - 5.00$ [s]	
	2 value♥ 0.1 – 6.0 [Hz / s]	Define time value for ROCOF.
	1 value♥ 0.1 − 6.0 [Hz / s] ROCOF threshold stage	
	ROCOF threshold stage	Define threshold for ROCOF
	Frequency shift ∃≣ Off On	Activate frequency shift.
	Fraguanayshift	Advanced islanding detection [See section 10.5) Page 68]
	Enhanced Island Detec- tion	NOTE: Grid operators require shutdown of the device with standalon grid detection
1234	Waiting time after grid failure	Set wait time for grid monitoring.
	Monitoring time grid voltage	 Set time for voltage monitoring.
1121918	Monitoring time PV voltage	Set time for voltage monitoring.
	Max. conn. frequency after grid failure	




1-2-3-4	Internal		NOTE: Opportunity to limit the power internally
	Power Limitation		Specify the activation status.
	⊟ ≣ Status	_	
1-2-3-4	Maximum apparent power Slim		NOTE: The max. apparent power limits the internal power of the device.
	🍄 1000 – S _{max} [VA]		More detailed information at:
			Other grid-supporting functions that are effective in the case of active power [See section 10.4 Page 67]
			Enter the value or set the value using the slider.
			The apparent power is limited globally to the configured value in VA. All active and reactive power control values use S_{lim} instead of S_{max} as 100 %, if S_{lim} is configured.
1-2-3-4	Maximum active power		More detailed information at:
	Plim 🍄 1.0 - 100.0 [% Slim]		Other grid-supporting functions that are effective in the case of active power [See section 10.4 Page 67]
	Password protection		Enter the value or set the value using the slider.
	⊟ ≣ Status		Active power is limited globally to the configured value in % $\rm S_{lim}$ or $\rm S_{max}$
			1 Optional: Activate password protection.
			2 Confirm the action field.
1 2 3 4	EPC (extended power control)		NOTE: EPC settings
	Fallback power		1 Set fallback power.
	♀ 0 – 1000 %		2 Set time until shutdown takes place.
	Timeout		3 Apply the values using the Apply button.
	✿ 3 − 100000 s		
1234	Power rampup active		NOTE: Power ramp-up is used to ramp up the power gradually
	Power rampup gradi- ent		Set increase.
	🌣 1 – 600 [% / min]		
	Rampup on every con-	_	1 Activate option.
	nect		2 Activate optional password protection.
	B ≡ Status		3 Confirm action field
	Rampup on first con- nect		
	⊟ ≣ Status		
	Rampup after grid fail- ure		
	B ≡ Status		
	Password Protection		
	B ≡ Status		
1-2-3-4	Priority mode		Set priority for reactive power – Q or active power – P.
	Q-Priority P-Prior- ity		NOTE: When it comes to P priority, the reactive power adjustment range is limited subject to the active power that is currently available and fed in.



©⊡⊡⊡ Activation th with overfree ≊ 50.2 – 70 (quency 🕒	 Set frequency thresholds for activating the power limitation with overvoltage. Set the frequency thresholds for activating the power limitation
Activation th with underfr а≅ 40 – 45 (H	equency	with undervoltage.
াজনাৰ Power reduc	tion P(U)	NOTE: To prevent the device from shutting down due to overvoltage protection, the active power can be regulated in addition to reactive power control in order to reduce the active power feed-in whereby the output voltage is reduced.
ায়ভৰ P(U) operatio ট≣ Off On	on mode	 Activate the control process. Off: Deactivates dynamic grid support using dynamic reactive current. Dynamic grid support remains active on account of immunity to interference.
াত্রকার Reference po ≣≣ Actual pov Nominal pow	ver	Select the power-dependent control method.
TERM Evaluated vo	ltage	Select the voltage to be rated.
B≣Maximum voltage Pos phase sequer voltage	itive	Specifies which voltage is evaluated in a three-phase system.
াইয়েন Hysteresis m	ode	NOTE: Hysteresis mode affects the shutdown response of P(U).
⊟≣Off On		Activate the mode.
ು⊡⊡≊ Deactivation 🗘 0 – 65534		Set the gradients for the power limitation.
চ্চেন্দ্ৰৰ Deactivation 🌣 0 – 60000		Specify the time for voltage reduction.
tene Active curve ♀1 - 5		 Select active curve. NOTE: Up to 5 characteristic curves can be configured independently and one of them can be activated for regulation each time.
াদ্র্যন্তর Number of n 2 - 5	odes	Specify the number of nodes.
Power 	D [%]	Specify power for 1st, 5th node as a percentage of the maximum power.
Voltage ✿ 0.0 − 126.0	D [%]	1 Specify voltage for 1st, 5th node as a percentage of the maximum voltage.
Password pro	otection	2 Activate optional password protection.
₽ ≡ Status		3 Confirm the action field.
TERM Activation th		Specify the activation threshold.
≆ 230V – 27	6V 🛄	NOTE: If the 10 min mean value of the voltage exceeds the activation threshold, then the function is enabled. The power level is adjusted in such a way that the instantaneous effective voltage value does not exceed the activation threshold value.
াফাৰ Deactivation 출 230V – 27		NOTE: If the 10 min mean value of the voltage falls below the deactivation threshold, then the function is disabled.1 Specify the deactivation threshold.



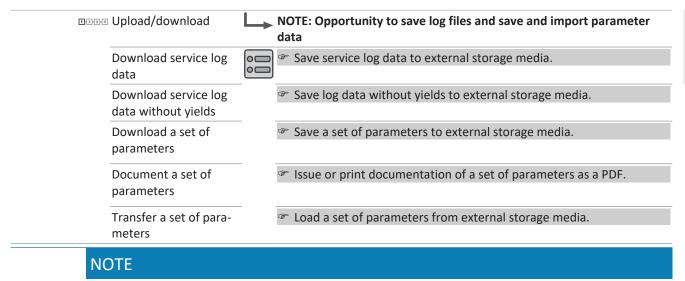

With regard to the selection of country settings, KACO new energy attests:

- > that the relevant certificates are only valid if the corresponding country settings have been selected.
- > that all configured grid parameters must be configured in accordance with the requirements of the grid operators.
- > that the configuration of parameters using IEEE 1547: 2003 table 1 is possible but is only permitted if it is requested by the grid operators.

9.5 Monitoring the device

The device has an integrated web server. This makes it possible to monitor and record the operating state and yield of your PV system.

USB interface

Use an external USB storage device to read operating data saved on the device.

Reading log data

- 1 Connect a suitable USB storage device to the USB interface on the connection circuit board.
- 2 Open the "Log data view" menu.
- 3 Select "Save to USB".
- 4 Select the desired log data using the 4-way button.
- 5 Press the Enter button.
- » The device saves the selected log data to the USB storage device.



NOTE

The USB interface is approved solely for use with USB flash storage devices ("USB sticks"). The maximum available current is 100 mA. If a device with a higher power requirement is used, the power supply for the USB interface automatically shuts down to protect the device from damage.

Web server

This device has an integrated web server. After configuring the network and activating the web server in the Settings menu, you can open the web server from an internet browser. The language version of the website delivered by the web server is adapted dynamically to the pre-set language preferences in your Internet browser. If your Internet browser requests a language that is unknown to the device, the web server uses the menu language set in the device.

- \bigcirc You have connected the device to your network.
- 1 When using a DHCP server: Activate DHCP.
- 2 For manual configuration (DHCP off):



- 4 Assign a unique IP address.
- 5 Assign a subnet mask.
- 6 Assign a gateway.
- 7 Assign DNS server.
- 8 Save your settings.

Using the web server

To avoid problems with incompatibility, use the most recent version of your Internet browser. JavaScript must be enabled in the browser settings to display the web server correctly.



NOTE

You can also access the web server of the device via the Internet. To do this, additional settings of your network configuration, particularly your internet router, are required. Note that communication with the device is carried out over an unsecured connection, particularly in the case of a connection via the internet.

○ Configure the Ethernet interface.

- \circlearrowright Connect the Ethernet cable.
- 1 Open an Internet browser.

2 In the address field of the internet browser, enter the IP address of the device and open the site.

» The internet browser displays the home screen of the web server.

After it has opened, the web server displays information about the device as well as the current yield data.

Feed-in power	Generator power
• Status	Generator voltage
Grid power	Unit temperature
Grid voltage	

Tab. 4: Display of measurement and yield data

In order to display and export yield data, proceed as follows:

Select the display period

1 Call up the web server

2 Select the display period by selecting one of the buttons: daily view, monthly view, yearly view or overview.

Filtering the display period (only possible with daily view)

- 1 Open the web server.
- 2 Select the daily view.

3 To show or hide measurements, select or deselect the corresponding checkboxes in the "Choose view" area.

Exporting data

- 1 Filter the display data if necessary.
- 2 Select the display period if applicable (daily, monthly, yearly or overview).
- 3 Press the "Export data" button.

4 Save the file.





Regardless of the display data selected in the "Choose view" area, an export file always contains all measurement data and yield data available for the selected period.

KACO

9.6 Performing a firmware update

You can update the software of the device to a new version using the integrated USB interface. Use a FAT32-formatted USB stick to do this.

Do not use any storage media with an external power supply (for example: an external hard disk).

New functions can be added to the device via firmware updates.



NOTE

Ensure the active DC power supply of the device

It is only possible to update all of the device's components to the most current firmware version in this operating state.

Damage to the device from faulty power supply

The update can fail if the power supply is interrupted during the update process. Parts of the software or of the device itself may be damaged.

- > Never disconnect the DC and AC power supply for or during a firmware update.
- > Do not remove the USB stick during the firmware update.

Preparing a firmware update

- 1 Download the firmware update file from the KACO web site www.kaco-newenergy.com and store it on your hard disk.
- 2 Extract the complete firmware update file to a USB stick.
- » Perform the firmware update.



NOTE

In order to adopt new country-specific parameters, the set user country must be changed prior to every firmware update.

> Once the firmware update is complete, you can return to the original user country.



The firmware update can take several minutes. The "Operating" LED flashes during the update process. The device may restart several times as required.

The following message appears if the DC power supply is too low: "DC power supply too low! Perform update anyway?.

In this case, select "No" and perform the update with a stable power supply.

Performing a firmware update

- \circlearrowright Ensure that the power supply is connected.
- 1 Connect the USB stick to the device.
 - ⇒ The message appears on the display: "Software found. Load?"
- 2 If you would like to perform the update, press the "Yes" button. If "No", pressing the "Enter" button cancels the update process and the device goes into feed-in mode.
 - \Rightarrow The device begins the update.
 - The update has been imported in full when the message "Software update successful. " appears.
 - If the update fails, the message "Software update incomplete" appears.
- 3 When an error occurs, the update process must be repeated.

You can check to see if the update was successful in the menu:



Displaying the firmware version

- The Information / SW version menu.
- » The device will display the versions and checksums of the software that is currently loaded.

9.7 Access via Modbus



NOTE

In order to make use of the Modbus functionality, we recommend using the "SunSpec-Modbus-Interface" specification we have made available for the firmware version installed on your device.

Follow the description in the document "Modbus-Protokol.pdf" in order to use the two Excel files with a high level of process reliability.

 \circlearrowright Firmware version of device is identical to the specifications of the Sunspec® Modbus®.

1 Enable the entry Network - Modbus TCP - Operation mode / Network services - Modbus TCP - Operation mode in the menu on the device or on the web interface.

- 2 If necessary, allow write access.
- 3 Set up the Port for access. [Default: 502]
- » Access via Modbus enabled.

10 Specifications

10.1 Reactive power control

Reactive power can be used in electrical energy supply networks to bolster the level of voltage. As such, feed-in inverters can contribute to statistical voltage stability. Reactive power brings about a voltage drop at the inductive and capacitive components of the equipment which can either bolster or reduce the level of voltage. If the generating plant draws inductive reactive power while active power is being fed in, part of the voltage swing caused by the active power feed can be compensated for by the supply of reactive power.

This reactive power mode and the respective control process are specified by the grid operator. If no control process has been specified, then the system should be operated using a reactive power specification of 0%.

10.1.1 Operating power range depending on grid voltage

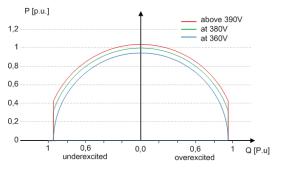


Fig. 42: P-Q operating range for devices below 12 kVA with U_N 220/380, 230/400, 240/415V (Qmax=0.95Smax)

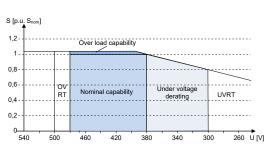


Fig. 43: Apparent power subject to grid voltage for devices below 12 kVA with UN 220/380, 230/400, 240/415V

10.1.2 Dynamics and accuracy

In all control methods the specified target value at the inverter's connection terminals is adjusted using a stationary deviation of the reactive power of maximum 2% S_N . This maximum deviation always relates to the specified value as reactive power. If the shift factor cos φ is specified in the control method, then the deviation relates to the reactive power value brought about by the current power level.

The transient response of the control methods is determined by a PT-1 filter. In this case, the settling time corresponds to 5 Tau, or in other words, achieving approx. 99% of the final value for a PT-1 filter. Subject to the control method selected, there are also other parameters that determine dynamic behaviour.

10.1.3 Reactive power functions

The following functions for controlling the reactive power are implemented in the devices listed above:

- · cos φ constant
- Q constant
- cos φ /(p/pn)
- Q(U) 10 nodes
- Reactive power is prioritised in each method. The maximum possible active power that can be fed in is reduced in line with the P-Q operating range when a specific reactive power level is specified.

$\cos \phi$ constant

In cos- ϕ constant mode the specified displacement factor cos- ϕ is set permanently by the inverter. In doing so, the reactive power level is set according Q=P*tan ϕ dependent on power output which produces the specified displacement factor cos- ϕ continuously. If the specification is changed, the new value is adopted attenuated by a filter. The transient time is 1 s with the transient response of a first-order filter (PT-1) with a time constant of Tau=200ms. The specified displacement factor may be configured in the display or via communication, via KACO RS485 protocol and MODBUS/SunSpec.

If the applicable grid code requires the $\cos-\phi$ response to set point by a defined gradient or settling time slower than the configured Tau=200ms, this gradient or settling time must be implemented in the plant control system.



Q constant

In Q constant mode, the specified reactive power value is set permanently by the inverter. If the specification is changed, the new value is adopted attenuated by a filter. The transient time is 1s with the transient response of a first-order filter (PT-1) with a time constant of Tau=200ms. The specified reactive power may be configured in the display or via communication, via KACO RS485 protocol and MODBUS/SunSpec.

cos φ /(P/Pn)

In $\cos \phi/(P/Pn)$, mode, the set value of $\cos-\phi$ and, derived from this, the set value of the reactive power is calculated continuously as a function of the actual power level. This function ensures that grid support is provided by the reactive power when a significant voltage increase is anticipated due to a high feed.in level. A characteristic curve is specified which can be used to configure up to 10 nodes, value pairs for active power and $\cos \phi$. The active is entered as a % in relation to the nominal power. Other parameters allow to limit functionality and to limit activation to certain voltage range.

Q(U)

In Q(U) 10 nodes mode, the set value of the reactive power is calculated continuously as a function of the grid voltage. This function ensures that grid support is provided by reactive power as soon as the voltage actually deviates from the target voltage. In this case, a characteristic curve is specified which can be used to configure up to 10 nodes, value pairs for voltage and reactive power. Other parameters allow to limit functionality and to limit activation to certain power levels as well as parametrize the transient response.

The positive sequence voltage is used to calculate the reactive power target value for three-phase units.

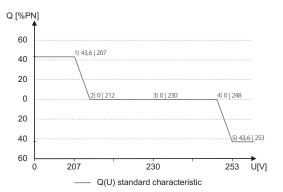


Fig. 44: Q(U) standard characteristic curve with 5 nodes

10.1.4 Parameters for reactive power control

Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
		cos-phi const.	Specified displacement factor
		♀ 1-0.3	
		➡ Over-excited un- der-excited	Reactive power mode Under-excited relates to inductive load, over-ex- cited relates to capacitive load.
		Q constant	Specification as a % of the maximum power
		🍄 0 – 100 [% S _{max}]	
		B≡Under-excited over-excited	Reactive power mode Under-excited relates to inductive load, over-ex- cited relates to capacitive load.
		cos-phi(P/Plim)	
		Settling time 200 – 30000 [ms]	Determines the dynamic behaviour in the event of a change in the $\cos \phi$ set value. With a change of the active power or the lock-in and lock out voltage, the $\cos \phi$ is changed according to a PT-1 characteristic curve with a settling time of 5 Tau.
		Lock-in voltage	The control is activated above this voltage.
		23V – 287V	



Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
		Lock-out voltage	The control is deactivated below this voltage.
		ੜੋ 23V – 287V	
		Number of nodes	Specify the number of nodes for the $\cos \phi/(p/pn)$ characteristic curve
		‡ 2 – 10	
		1st node 10th node	Power of the node as a percentage of the maximum power.
		B = Voltage Reactive power Excitation ↓ 0 – 100 [% S _{max}]	For the 1st node, the power must be 0%; for the last node, the power must be 100%. The power values of the nodes must increase continuously.
		- 1107-	Note: Storage inverters only for feed-in operation
		差0-100%	$\cos \phi$ of the node
		差 Over-excited un- der-excited	Reactive power mode Under-excited relates to inductive load, over-ex- cited relates to capacitive load.
		Q(U) 10 nodes	
		Lock-in power • 0 – 100 [% S _{max}]	Power threshold, function is activated if limit value is exceeded.
		Lock-out power $0 - 100 [\% S_{max}]$	Power threshold, function is activated if limit value is undershot.
		Lock-in time	Length of time that the active power must remain below the lock-in power level before control is deactivated.
		Lock-out time $0 = 60$ [s]	Length of time that the active power must remain below the lock-out power level before control is deactivated.
	1-2-3-4	Downtime	Set the intentional delay for the start of the Q(U) function.
		출0 s − 10 s	NOTE: If the voltage switches from a characteristic curve section with Q=0 to a characteristic curve section with Q \neq 0 under active control, then the reactive power setting process is delayed by the set dead time. Once the dead time has expired, the control circuit is no longer subject to a delay and the set settling time determines the transient behaviour.
		Rise Outg. grad. & Fall. Outg. grad. [⊞] ≡ increasing decreas- ing	In addition to configuring the dynamic behaviour using the transient time corresponding to a first-order filter, the reactive power setting can be determined by a maximum gradient - this means the maximum change in the reactive power per time period.
		✿ 1 − 60000 [% S _{max} / min]	Maximum change in the reactive power S_N /min in the event of a change to over-excited mode
			NOTE: The gradient is overlaid with the settling time.
		Min. cos-phi Q1 - Min. cos-phi Q4	In the event of a significant voltage deviation, the maximum reactive power adjustment range can be limited by a minimum $\cos \phi$ factor in order to prevent an excessive reactive power supply and, as a result, a significant reduction in the maximum active power that can be fed in.
		Q1	Minimum $\cos \phi$ in over-excited operating mode (in-feed).
		Q4	Minimum cos ϕ in under-excited operating mode (in-feed).
		Q2	Minimum cos ϕ in over-excited operating mode (charge).
		Q3	Minimum cos ϕ in over-excited operating mode (charge).



Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
		Priority mode	P priority can be selected as an alternative to the standard setting Q pri-
		差 Q priority P priority	ority. When it comes to P priority, the reactive power adjustment range is limited subject to the limited apparent power of the inverter and the active power that is currently available and fed in.
	Active curve ⇒ 1 − 4	Up to four characteristic curves can be configured independently and	
		≩ 1-4	one of them can be activated for regulation each time.
		Reset the curve	Reset active curve to the factory setting, depending of the country set- ting.
		Number of nodes	Specify the number of nodes for the Q(U) characteristic curve.
		♀ 2 - 10	
		1st node 10th node	Voltage of the node in volts.
		OV - Max. voltage in continuous operation	The voltage values of the nodes must increase continuously. At voltages below the 1st node and voltages above the last node, the reactive power value of the 1st or last node is used each time.
		1-0.3	Reactive power of the node as a percentage of the maximum power
		Over-excited under- excited	Reactive power mode Under-excited relates to inductive load, over-ex- cited relates to capacitive load.

10.2 Active power regulation

10.2.1 Active power limitation

The function "P target value" is integrated into the MPP tracking of the inverter on all PV inverters. The P target value is continuously re-calculated on the basis of the MPP tracking algorithm.

P limit

The function "P limit" is available for limiting the maximum feed-in power. If necessary, this can be used to reduce the feed of an inverter, e.g. for managing bottlenecks for the operator of the distribution grid.

P limit is only available via the MODBUS/SunSpec inverter model 123 WMaxLimPct and via RS485 communication. You can find detailed information on the communication protocol at www.kaco-newenergy.de in the "Software" subsection of the "Downloads" section.

When a target value is received for P limit, the output power of the inverter is limited to the specified power value. If the limit value is changed, the new value is adopted by way of a filter and a gradient limitation. The current power may be below the specified limit value because the available power (PV) or the target power value (storage) may be below the specified limit value. Depending on the inverter series, the settling time and gradient limitation may be adjustable.

Parameters	Setting	Reference	Description
Power Limitation	‡ 0 – 100 [%]	SUNSPEC	Specifies the standard power in the event of a
[WMaxLimPct]		XLS XLS	communication failure. If no active power com- mand is received within the configured timeout, the inverter sets the power to the configured fallback power.
Timeout	‡ 3 – 100000 [%]	SUBSEC	Specifies the timeout time after which the in-
[WMaxLimPct_RvrtTms]		Nuller	verter sets the fallback power in the event of a communication failure.
Settling time	🍄 1000 [ms]		Non-configurable settings 1 s.
[VArPct_RmpTms]			



Limitation of power gradients

The power reduction parameters can be adjusted in SunSpec model DID123. During this process, you should also check whether internal and/or external power reduction is active.

Internal power limitation	Parameters for external power limita- tion	Parameters for power limitation	
Status = active	Status = active	Parameters in SunSpec model 123:	
Maximum apparent power S _{lim} = 100000 VA		"WMaxLimPct" = 50% P _{lim} (approx. 40000 W) "WMaxLimPct RvrtTms" = 60 s	
Maximum active power P _{lim} = 80% (approx. 80000 W)	AC fallback active power Pfb = 75% P_{lim} (approx. 60000 W)	"WMacLimPct_RmpTms" = 2 s	
	PT1 settling time = 1 s	"WMaxLim_Ena" = 1	

Tab. 5: Sample parameters for power limitation

If the ramp time "WMacLimPct_RvrtTms" in the SunSpec model is specified as 0 s, then the internal output gradient is used. Otherwise, the set value will be used.

Irrespective of the communication protocol used, the settling time "WMaxLim_Ena" is used in order to transfer the new power value. Otherwise, the internally configured value will be used.

The additional ramp time "WMacLimPct_RmpTms" specifies the jump time from a power value to the new power value.

The following formulae are used to calculate the gradient $S_{\mbox{\tiny lim/min}}$:

$$GradientWattPerMin = \frac{\left(\frac{WMaxLimPct}{100} \times Plim - Pactual\right)}{WMaxLimPct_{RmpTms}} \times 60 \times \frac{100}{Slim}$$

$$GradientWattPerMin = \frac{\left(\frac{50\%}{100} \times 40000 W - 60000 W\right)}{2 s} \times 60 \times \frac{100}{100000 VA}$$

GradientWattPerMin = -600 % Slim /min

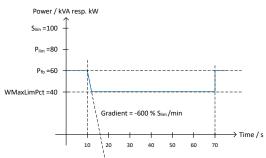


Fig. 45: Power gradient according to sample parameters and calculation

The following formulae are used to calculate the Q filter parameter and cos-phi gradient:

$$GradientVArPerMin = \frac{\left(\frac{VArMaxPct}{100} \times Slim - Qactual\right)}{VArPct_RmpTms} \times 60 \times \frac{100}{Slim}$$

Fig. 46: Formula for calculating the Q filter parameter

$$GradientVArPerMin = \frac{\left(\frac{VArMaxPct}{100} \times Slim - Qactual\right)}{OutPFSet_RmpTms} \times 60 \times \frac{100}{Slim}$$

Fig. 47: Formula for calculating the cos-phi gradient (internal power gradient)

10.2.2 Voltage-dependent power reduction P(U)

If it is not possible to compensate adequately for increase in voltage in the upstream distribution network by intake on reactive power, it may be necessary to curtail the active power. In this case, P(U) control is available for making optimum use of the capacity of the upstream grid.



P(U) control reduces the active power that is fed in as a function of the grid voltage using a prescribed characteristic curve as a basis. P(U) control is implemented as an absolute power limit. The actual power of the inverter may vary freely below this limit due to a possible fluctuation in the available power or the target value, but at no time increases above the absolute power limit.

[See figure 48] [Page 60] and [See figure 49] [Page 60] are two examples of configuration. In figure 1 without hysteresis, the function is activated as soon as the voltage exceeds the configured voltage of data point 1 (dp1). The power limit follows the characteristic curve, a straight line between dp1 and dp2. The function is deactivated as soon as the voltage falls below dp1. In [See figure 49] [Page 60], the function is activated as soon as the voltage exceeds the configured voltage of dp2. In this case, dp1 does not result in activation of the function because the power limit remains at 100%. The power limit follows the characteristic curve, a straight line between dp2 and dp3. However, because hysteresis is activated, the power limit is not increased when the voltage drops. The function is deactivated as soon as the voltage falls below dp1.

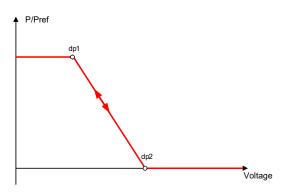


Fig. 48: Example characteristic curve without hysteresis

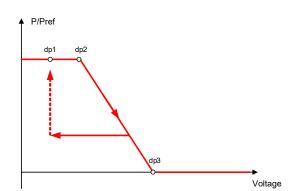


Fig. 49: Example characteristic curve with hysteresis and a deactivation threshold below the activation threshold

Country- spec. Set- tings	Men u level	Display/ Setting		Action in this menu/meaning
			Activate the control process.	
		B≣ Off On		Off: Deactivates dynamic grid support using dynamic reactive current. Dynamic grid support remains active on account of immunity to inter- ference.
		Reference power ≣≣ Actual power Nominal power		Specifies the power reference for the characteristic curve. 100 % here corresponds to the nominal power or the actual power at the time the function was activated, the time when the voltage passes the configured node.
	1-2-3-4	াফাগৰ Evaluated voltage		Select the voltage to be rated.
		and the set of the se		Specifies which voltage is evaluated in a three-phase system.
		Hysteresis mode B≣Off On		Off: In non-hysteresis mode, the active power is increased immediately with dropping voltage.
				On: In hysteresis mode, the power is not increased with dropping voltage
		Deactivation gradient		If the available power is above the actual output at the time of deactiva-
		🍄 0 – 65534 [% / min]		tion, the power increase back to the maximum power is limited. The limitation is implemented by an absolute power limitation that in- creases with a continuous gradient up to the maximum power. The ac- tual power of the inverter may vary freely below this limit due to a pos- sible fluctuation in the available power or the target value, but at no time increases above the absolute power limit.

10.2.2.1 Parameters for P(U)



Country- spec. Set- tings	Men u level	Display/ Setting		Action in this menu/meaning
		Deactivation time		Only evaluated with activated hysteresis mode: Monitoring time during
		🍄 0 – 60000000 [ms]		
		Settling time	ns] ive power set value. With a voltage change, the active power is c according to a PT-1 characteristic curve with a settling time of 5	Determines the dynamic behaviour in the event of a change in the act-
		🍄 100 – 1200000 [ms]		ive power set value. With a voltage change, the active power is changed according to a PT-1 characteristic curve with a settling time of 5 Tau.
				Note: The settling time is overlaid with the increasing and decreasing gradient.
		Number of nodes		Up to five nodes for voltage [V] and power [% Pref] are configurable.
		Power		The power value of the first and last value pair is also used as the max- imum or minimum active power value that is valid across the limits of
		🍄 0,0 – 100,0 [% P _{ref}]		the characteristic curve.
		Voltage		
		🍄 80 – 125 [% U _{nom}]		
	1-2-3-4	Active curve		Select active curve.
		‡ 1-5	NOTE: Up to 5 charac	NOTE: Up to 5 characteristic curves can be configured independently and one of them can be activated for regulation each time.

10.2.3 P(f)

Adjusting the active power P(f) in the event of overfrequency

Feed-in inverters must assist with frequency stability in the grid. If the grid frequency leaves the normal tolerance range (e.g. ± 200 mHz), then the grid will be in a critical state. In the event of overfrequency, there is a generation surplus, in the event of underfrequency, there is a generation deficit.

PV systems must adapt their feed-in power relative to the frequency deviation. In the event of overfrequency, the power adjustment is determined by a maximum feed-in limit. The actual power of the inverter may vary freely below this limit due to a possible fluctuation in the available power or the target value, but at no time increases above the absolute power limit.

$$P_{max-limit} = P_M + \Delta P$$

Fig. 50: Equation 1

$$\Delta P = g \cdot P_{ref} \cdot (f_1 - f)$$

Fig. 51: Equation 2

Equation 1 [See figure 50] [\triangleright Page 61] defines the maximum limit with ΔP relevant to 2 [See figure 51] [\triangleright Page 61], P_M the current power at the time of activation and P_{ref} the reference power. In the case of PV inverters from KACO, P_{ref} is defined as P_M , the current power at the time of activation. f is the current frequency and f_1 is the specified activation threshold.

$$\Delta P = \frac{1}{s} \times \frac{(f_1 - f)}{fn} \times Pref$$

Fig. 52: Equation 3

$$g = \frac{1}{s \cdot f_n}$$

Fig. 53: Equation 4

In some standards, the power adjustment is specified by a drop (s) instead of a gradient (g), as shown in equation 3 [See figure 52] [> Page 61]. The drop s can be transformed into a gradient g in accordance with equation 4 [See figure 53] [> Page 61].



The frequency f remains above the activation threshold f_1 during an overfrequency incident. Consequently, the expression $(f_1 - f)$ is negative and ΔP corresponds to a reduction in the feed-in power.


The measurement accuracy of the frequency is greater than 10 mHz.


The specific mode of operation of the function is specified by the grid operator or the pertinent standards or the grid connection guidelines. The configurability of the function makes it possible to satisfy a wide variety of standards and guidelines. Certain configuration options are not available in some country settings because the pertinent standards or grid connection guidelines prohibit adjustments.

Adjusting the active power P(f) in the event of underfrequency

Some grid connection guidelines also require adjustment of the active power P(f) in the event of underfrequency. Due to the fact that PV systems are typically run at the maximum power point, there are no power reserves for increasing the power in the event of underfrequency.

However, in the event that the system power is reduced due to market regulation, it is possible to increase the active power up to the power level available. Because the inverter is unable to distinguish between P constant target values for obligatory bottleneck management by the grid operator and for market regulation, this needs to be implemented in the site-specific infrastructure of system control.

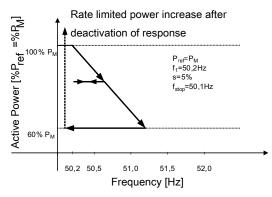



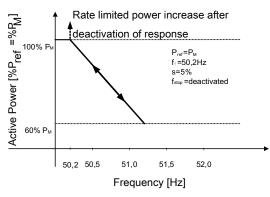


Fig. 55: P(f) example characteristic without hysteresis Mode 2

Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
		P(f) operation mode	Activate or deactivate function.
		B≣ Off Mode 1	Mode 1: With hysteresis activated. See figure 3.
	Mode 2	Mode 2: Without hysteresis activated FEHLENDER LINK	
		Power reference mode with overfrequency B≡ Actual power	Power reference with overfrequency:
			Power reference for power adjustment as in equation 6 and equation 7 for overfrequency incidents.
		Nominal power	Power reference with underfrequency:
Power reference mode with underfrequency 물를 Actual power Nominal power	with underfrequency [⊟] ≣ Actual power	Power reference for power adjustment as in equation 6 and equation 7 for overfrequency incidents.	

10.2.3.1 Parameters for P(f)



Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
	Activation threshold with overfrequency ≆ 50.2 – 70 (Hz) Activation threshold with underfrequency		Activation threshold (f1) overfrequency:
		Determines the frequency threshold for activating the function in case of overfrequency incidents. The active power adjustment is activated if the frequency rises above the configured value and mode 1 or 2 is activ- ated.	
		ੇ 40 − 45 (Hz)	In mode 2, the function is deactivated if the frequency falls below the configured value.
	P(f) intentional delay O – 5000 [ms]		Activation threshold (f1) underfrequency:
		Determines the frequency threshold for activating the function in case of underfrequency incidents. The active power adjustment is activated if the frequency falls below the configured value and mode 1 or 2 is activ- ated.	
			In mode 2, the function is deactivated if the frequency rises above the configured value.
			The activation of the function based on the activation threshold is delayed by the configured time.
		Note 1: This function is regarded as critical for the stability of the trans- mission grid and is therefore prohibited by several national grid connec- tion regulations.	
			Note 2: This function is stipulated as a requirement by some domestic grid connection directives in order to prevent any negative impact on is- land detection. However, P(f) has no negative impact on KACO's en- hanced island detection.
		Frequency of the max-	Deactivation range lower limit:
		imum deactivation	Only evaluated in mode 1.
		threshold ⊟≣ 45 - 50.2 (Hz) Frequency of the min- imum deactivation	The function is deactivated if the frequency returns to the deactivation range and remains in this range for the duration of the deactivation
			time. Deactivation range upper limit:
		threshold	Only evaluated in mode 1.
	⊟ ≣ 45 – 50.2 (Hz)	The function is deactivated if the frequency returns to the deactivation range and remains in this range for the duration of the deactivation time.	
		P(f) deactivation time	Only evaluated in mode 1.
	🍄 0 – 3600 [s]	The function is deactivated if the frequency returns to the range between the minimum and maximum deactivation threshold and re- mains in this range for the duration of the deactivation time.	
		P(f) deactivation gradi- ent ✿ 0 – 65534 [% / min]	If the available power is above the actual output at the time of deactiva- tion, the power increase back to the maximum power is limited. The limitation is implemented by an absolute power limitation that in- creases with a continuous gradient up to the maximum power. The ac- tual power of the inverter may vary freely below this limit due to a pos- sible fluctuation in the available power or the target value, but at no time increases above the absolute power limit.



Country- spec. Set- tings	Men u level	Display/ Setting		Action in this menu/meaning
		Maximum dynamic gradient frequency ✿ 50.22 – 70.5 [Hz] Minimum dynamic gradient frequency ✿ 45 – 50 [Hz] P(f) settling time ✿ 200 – 2000 [ms]	0	Dynamic gradient maximum frequency:
				If dynamic gradient mode is activated, the gradient is calculated in order to guarantee a linear power adjustment and reach the maximum char-
				ging power if the frequency rises to the maximum configured frequen
				Dynamic gradient minimum frequency:
				If dynamic gradient mode is activated, the gradient is calculated in order to guarantee a linear power adjustment and reach the maximum feed-in power if the frequency drops to the minimum configured frequency.
				Determines the dynamic behaviour in the event of a change in the act- ive power limit. In the event of a change in frequency, the active power is altered subject to a PT-1 characteristic curve using a settling time of 5 Tau.
				The settling time is overlaid with the increasing and decreasing gradient.
	1-2-3-4		0	Specify the increasing and decreasing output gradient.
	tion increase & Output 🖭 gradient limitation de- crease 🌣 1 - 65534 [% / min]	<u> </u>	Specifies the dynamic response on changing the active power for power increase and decrease. With a voltage change, the active power is changed with the specified gradient.	
			Note: The gradient is overlaid with the settling time.	

10.3 FRT

Dynamic grid support (Fault Ride Through)

A generator plant's ability to remain immune to voltage dips and voltage swells in the supply system is a key element in establishing a reliable energy supply. Immunity to interference ensures that brief disruptions do not result in a loss of generation capacity in a larger area of the interconnected grid. Grid support by way of fast fault current injection also limits the spatial extent of the incident.

With its dynamic grid support by way of immunity, the device has this characteristic. The ability to remain on the grid is particularly relevant. The protective settings also determine the device's ability to remain on the grid or not. Protective settings take the upper hand over the capacity of immunity to interference.

10.3.1 Dynamic grid support by way of immunity to interference

Interference immunity against undervoltage

Voltage drop above the limit curve in can be overcome without the need for shutdown from the grid. The feed-in power remains constantly within the limits of the maximum continuous current of the inverter.

If a reduction in power occurs, the power is brought back up to the pre-fault level within 100 ms of the voltage returning.



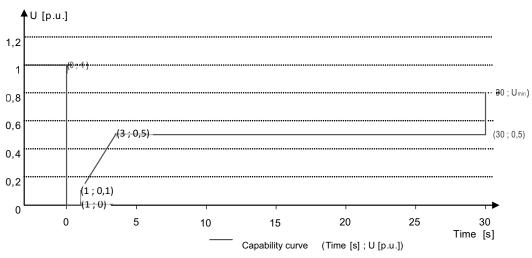


Fig. 56: Immunity to voltage dips characteristic curve relative to the nominal voltage

The inverters can ride through voltage swells provided the voltage level does not remain above the continuous operation voltage range for longer than 100 s and does not increase beyond the short-term max. operating voltage range (up to 100s). The values specific to each inverter can be found here.

The interface protection (voltage, frequencey, ant-islanding) integrated in the inverter is configurable in a range allowing the behaviour above. However, if the interface protection setting is limiting the voltage time characteristic, the interface protection will trip and interrupt the ride through as configured.

10.3.2 Dynamic grid support using a fast feeding of residual current

When dynamic grid support using a fast feeding of residual current is activated, then residual current is fed in in addition to the immunity to interference properties against drops and spikes described above.

The inverter adapts its current feed as soon as a drop or spike incident occurs in order to bolster the grid voltage. The support takes place in the event of voltage drop in the form of over-excited reactive current (corresponds to a capacitive load), in the event of voltage spike in the form of over-excited reactive current (corresponds to an inductive load). In the reactive current priority mode, the effective current is reduced to the extent necessary to comply with the limits of the maximum continuous current of the inverter.

A dip or swell is detected if either the normal operating voltage range setting is exceeded by at least one phase-phase or phase-neutral voltage, or if a step in the positive or negative sequence component of the voltage greater than the deadband setting occurs. The magnitude of the voltage step of the positive and negative sequence voltage equates to the difference between the pre-fault voltage and the actual voltage based on the reference voltage. The pre-fault voltage is calculated as a 50-periods mean value.

$$\Delta u = \frac{U - U50per}{Uref}$$
Fig. 57: Formula no. 1

The reactive current is adapted using a response time of <20 ms and a transient time of <60 ms after the incident has occurred. Responses to changes in the voltage during the incident or to the voltage recovery at the end of the incident take place with the same dynamic.

The formula for calculating the dynamic reactive current that is fed for the positive or negative phase sequence voltage is:

Fig. 58: Formula no. 2, depending on the nominal current IN of the inverter

For the positive and negative phase sequence voltage, Δu equates to the difference between the pre-fault voltage and the current voltage based on the reference voltage. The pre-fault voltage is calculated as a 1-min mean value.

$$\Delta u = \frac{U - U1min}{Uref}$$
Fig. 59: Formula no. 3



On account of the definition of a voltage jump in pre-norm EN50549-2 and in VDE-AR-N 4120 and VDE-AR-N 4110, it is typically the case that another voltage jump is detected when the incident is at an end, when the fault is rectified and when the voltage returns to a normal state. The result of this is that in an active operation mode a dynamic grid support using a fast feeding of residual current remains active even after the incident has passed and that reactive current is fed in according to the formulae (2) and (3). Dynamic grid support using fast feeding of residual current is then deactivated after a configured minimum support time, usually 5 s.

$l_{b}=(\Delta u_{1}-tb)*k*l_{N}$

Fig. 60: Formula no. 4

10.3.3 Extract from FRT menu

Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning		
	1-2-3-4	FRT (Fault Ride Through)	NOTE: The device supports dynamic grid stabilization (Fault Ride- Through).		
		B≡ Operation mode –	Setting: Manual		
		On Off	All parameters can be configured independently.		
		Setting Manual Pre- defined zero current	Setting: Predefined zero current		
			Dynamic grid support active on account of immunity to interference and zero current feed-in. During a voltage incident, the current in the inverter is reduced to zero.		
			All parameters are pre-configured, only the activation threshold for zero current has to be configured.		
		Priority – Reactive cur-	Priority: Reactive current priority		
		rent limitation Active current priority	Dynamic grid support active on account of immunity to interference and fast feeding of residual current. The inverter feeds additional reactive current according to the formulae (2) and (4).		
			Priority: Effective current priority		
			Dynamic grid support active on account of immunity to interference and fast feeding of residual current with dynamic reactive current. The inverter feeds in as much active power as available. If, as a result of this, the maximum continuous current is not achieved, the device supplies additional reactive current according to the formulae (2) and (4) up to the limit of continuous current.		
	Zero current under- voltage threshold		If one or more phase/phase or phase/neutral conductor voltages mov above the configured threshold, the inverter changes to zero current		
		Zero current over- voltage threshold	mode. The total current is regulated to virtually zero.		
	‡ 0 – 184 V / 253 – 340 V				
		Reference voltage	Nominal value of the phase/neutral conductor voltage used as a refer-		
		ence voltage for formula (1) and (3). Adjustable in the range from level 1 undervoltage protection to level 1 overvoltage protection.			
		quence dip Constant k negative se-	Amplification factor for the negative sequence used in the calculation of the reactive current using formulae (2) and (4) Can be configured independently for drops and spikes.		

KACO

Country- spec. Set- tings	Men u level	Display/ Setting	Action in this menu/meaning
		Constant k positive se- quence dip &	Amplification factor for the negative sequence used in the calculation of the reactive current using formulae (2) and (4) Can be configured inde-
		Constant k positive se- quence swell	pendently for drops and spikes.
		🍄 k 0 – 10 💿 2	
		Dead band	Dynamic grid support through fast feeding of residual current activated
		口 0 - 100 [% Uref] ^③ 10.0	in the case of voltage events with a voltage change greater than the dead band.
		Dynamic reactive cur- rent only 聞≣Off On	Standard: The reactive current according to the formulae (2) and (4) is fed as additional reactive current. The means that sum of the pre-fault and additional reactive current is fed in.
			Only dynamic: The reactive current according to the formulae (2) and (4) is fed in as absolute reactive current. This means that regardless of the reactive current before the voltage event, only the reactive current is fed in according to the formulae (2) and (4) is fed in during the voltage event.
	Dead band mode □= ☑=Mode 1 Mode 2	Mode 1: When calculating the reactive current, the value of the dead band is not subtracted from the amount of voltage change.	
		As such, formula (2) applies to overvoltage and undervoltage incidents.	
		Mode 2: When calculating the reactive current, the value of the dead band is subtracted from the amount of voltage change. For overvoltage and undervoltage events, formula (4) therefore applies:	
			$l_b = (\Delta u_1 - tb) \star k \star l_N$
		Minimum operating voltage	Dynamic grid support via fast feeding of residual current is activated on voltage events with at least one phase/phase or phase/neutral con-
		🍄45 – 125.0 [% Unom] &	ductor voltage outside the configured normal operating voltage range. Dynamic grid support via fast feeding ore residual current is deactivated when the voltage returns to the normal operating voltage range.
		Maximum operating voltage	
		🍄45 – 125.0 [% Unom]	
		Reactive current limita- tion	The reactive power component of the fast feeding of residual current is limited to permit a defined proportion of active power components.
		🍄 0 – 100 % [% Imax]	
		Minimum support time	If due to a voltage jump in accordance with formula (1) and the con-
		🍄 1000 – 15000 ms	figured dead band is activated, the dynamic grid support is deactivated via fast feeding of residual current after the minimum support time elapses.


10.4 Other grid-supporting functions that are effective in the case of active power

10.4.1 Permanent power limitation

The maximum active and apparent power to be installed for a generation plant is agreed between the grid operator and plant operator. The device capacity of a plant can be set to the exact agreed value using the S_{lim} and P_{lim} settings. To ensure that the load on the devices in the plant is uniform, we recommend distributing the performance reduction evenly across all devices.



Some grid connection rules insist that the agreed reactive power be supplied from every operating point of the plant without a reduction in the actual active power. Considering the fact that all KACO TL3 inverters have a semi-circular P-Q operating range, a reduction in the active power is, however, required during operation at maximum active power because an apparent power reserve is not available. By adjusting P_{lim}, the maximum active power can be restricted in order to establish an apparent power reserve and ensure that the agreed reactive power can be delivered from any active power operating point. [See figure 61] [Page 68] Displays the appropriate P-Q operating range with a required example active power of 48% of the maximum apparent power of the plant or 43% of the maximum active power of the plant.

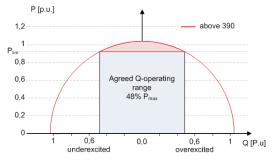



10.4.2 Soft start-up / Power rampup

A soft start-up function is available to prevent the grid from being negatively impacted by a sudden increase in feed-in power from the inverters.

When the inverter is activated or switched on, the increase in power is restricted by the set gradient. It is possible to configure whether the soft start-up should occur every time the device is switched on, only upon initial start-up each day or only upon start-up after the device has been switched off by grid protection. Due primarily to the fact that there is the risk that many plants could increase their power levels simultaneously after they have been switched off by grid protection, a soft start-up is usually only required for start-up after a device has been switched off by grid protection.

The soft start up is implemented by an absolute power limitation that increases with a continuous gradient up to the maximum power. The actual power of the inverter may vary freely below this limit due to a possible fluctuation in the available power or the target value, but at no time increases above the absolute power limit.

10.5 Advanced islanding detection

Due to decentralized generation, there is the possibility that a deactivated part of the grid will remain live in an unintended island due to the balance of load and generation in this part of the grid. The detection of unintended island formation is an important function of decentralized generating units and is related to the prevention of damage to equipment as well as safety of personnel.

Depending on the structure and the operation of the distribution grid several dangers exist:

- In case of maintenance work in a distribution grid, personnel may be placed in danger if the deactivated part of the grid remains live as an island. This is especially the case if not all safety rules are followed.
- If fast auto-reclosure is used in a distribution grid and the deactivated part of the grid remains live as an island, reclosure will likely happen during phase displacement which might cause damage to rotating machinery on the grid.
- In the event of a fault in a medium voltage grid, the faulty part of the grid is disconnected. If the fault has a significant
 resistance, the deactivated part of a medium-voltage grid remains live as an island. Depending on the type of fault, but
 explicitly in case of a fault in the transformer, dangerous medium voltage might be accessible or even present in lowvoltage appliances.

Especially for the last example very fast disconnection of the generating units to cause collapse of the forming island is necessary. At the same time any island formation detection method may cause false tripping. The industry is therefore in constant research to develop methods that are fast and reliable and at the same time reliably prevent false tripping.

Enhanced island detection method

The enhanced island detection of KACO new energy, employs a strategy to reliably detect island formation that is based on the characteristic differences between an interconnected grid and an islanded grid, thus ensuring reliable fast detection and prevention of false tripping.



An interconnected grid is dominated by rotating machinery, as a consequence frequency is proportional to active power balance and voltage is proportional to reactive power balance. In contrast an islanded grid behaves like a resonant circuit, as a consequence frequency is proportional to reactive power balance and voltage is proportional to active power balance. The active enhanced island detection method detects this difference by monitoring the behaviour of the grid. The enhanced island detection is monitoring the natural fluctuation of the grid frequency and injects a minimal reactive power proportional to the rate of change of frequency. In the moment of formation of an island the connected power systems is closing a positive feedback loop what allows the inverter to detect the changed situation and to disconnect. In case of formation of an island, the inverter disconnects within some 100 ms, well below 1000 ms.

- The number of parallel inverters does not affect the reliability of this function.
- This method also ensures that the impact on the distribution grid is kept to a minimum.
- · In normal operation no effects on harmonic content, flicker and grid stability are detected.

This detection method is combined with a two stage passive rate of change of frequency (ROCOF) observation. If the RO-COF of the grid exceeds the configured disconnection threshold (stage 1) for the configured disconnection time, the device switches to zero current mode. If the ROCOF of the grid exceeds the configured shutdown threshold (stage 2) for the configured shutdown time, the device shuts down. In case of an island, this will shut down the island instantaneously. If the grid stabilizes, what might be the case if the ROCOF event was due to a short disturbance in the power grid, the inverter will resume normal operation. In the event of active stage 1, the device switches to zero current mode, and restarts the infeed after a few 100ms. At stage 2, the device has shut down and the set reconnection conditions apply.



11 Maintenance and troubleshooting

11.1 Visual inspection

Inspect the product and cables for visible external damage and note the operating status display, where applicable. In the event of damage, notify your installation engineer. Repairs may only be carried out by authorised electricians.

\Lambda DANGER

Risk of fatal injury due to contact voltages!



Removing the plug connections before disconnecting the device from the PV generator may lead to injuries and damage the device.

- During installation: Electrically disconnect the DC positive and DC negative from the protective earth (PE).
- > Disconnect the device from the PV generator using the integrated DC isolator switch.
- > Remove the plug connector.



\Lambda DANGER

Dangerous voltage due to two operating voltages

Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched. The discharge time of the capacitors is up to 5 minutes.

- > Only appropriately qualified electricians authorised by the mains supply network operator are permitted to open and maintain the device.
- $\,\,>\,$ Before opening the device: Disconnect the AC and DC sides and wait at least 5 minutes.

NOTE



There are components in the housing of the device which may only be repaired by the customer service team.

Do not attempt to repair faults that are not described here (in the chapter on troubleshooting and fault rectification). Contact our customer service department. Only perform the maintenance work that is described here.

The device should be checked for proper operation by a qualified electrician at regular intervals and if you experience problems, you should always contact the system manufacturer service department.

11.2 Cleaning

11.2.1 Cleaning the housing



Danger of death due to penetrating fluid

Serious injuries or death can result if moisture enters the system.

- > Only use completely dry objects to clean the device.
- > The device should only be cleaned from the outside.

DANGER

Damage to the housing parts when using cleaning agents!

> If the device is contaminated, only clean the housing, cooling fins, housing cover, display and the LEDs with water and a cloth.

WARNING! Do not use compressed air or high-pressure cleaners!

1 Use a vacuum cleaner or a soft brush to remove dust from the fan cover and from the top of the device on a regular basis.





NOTE

- Refer to our service and guarantee conditions on our homepage.
- \checkmark The cleaning intervals must be adapted to match the ambient conditions of the installation location.
- $^{\scriptscriptstyle >}$ In sandy environments, we recommend cleaning the heat sinks and fans every quarter.

11.3 Replacing the fan

The device is equipped with an axial fan. This is located in the left-hand side panel of the housing. Replace the fan in the following circumstances:

- Heavy soiling
- A fault

 \circlearrowright Device switched off on integrated DC isolator switch.

- \circlearrowright Wait until the fan is no longer turning.
- 1 Release the protective cover and ventilation grille by unscrewing the 4 screws $[XT_15]$
- 2 Carefully take down the protective cover and fan and remove the power supply connector plug from the fan.
- » Replace or clean the defective fan.

Dismounting the fan

- \circlearrowright You have removed the cover and fan.
- U NOTE: Make a note of the installation position of the fan before you dismount it!
- 1 Remove the fan from the protective cover by opening the latch bracket.
- 2 Clean fan cover.
- » Install the replacement fan.

Inserting the fan

- \circlearrowright You have removed the defective fan.
- **O NOTE:** The replacement fan should be identical in construction and type.
- 1 Insert the replacement fan into the latch bracket on the protective cover.
- 2 Latch fan into latch bracket.
- 3 Plug in the fan plug.
- 4 Place fan cover onto fan cavity and fix in place with the fastening screws.
- » The replacement fan is ready for operation.
- » Switch unit on.

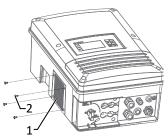


Fig. 62: Removing the fan




Fig. 63: Unplugging the fan

1	Protective grating for fan
2	Fastening for protective grat- ing
3	Fan
4	Fan lock



11.4 Shutting down for maintenance / troubleshooting

1 DANGER



Lethal voltages are still present in the connections and cables of the device even after the device has been switched off and disconnected!


Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched.

Only appropriately qualified electricians authorised by the mains supply network operator are permitted to open and maintain the device.

Comply with all safety regulations and current technical connection specifications of the responsible power supply company.

11.5 Disconnecting connections

11.5.1 AC connection

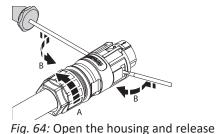




Fig. 65: Disconnect AC connection plug




Fig. 66: Detach the AC connection plug from the device connector

○ Ensure there is no AC/DC voltage present.

1 Use a screwdriver (blade size 3 mm) to push in the latch on the coupling.

2 Unlock the plug connection and pull out the connector.

3 Unscrew the cable fitting.

4 Use a screwdriver to unlock the contact carrier on both sides.

5 Remove the contact carrier from the housing.

6 Unfasten and remove the screws on the contact carrier.

11.5.2 DC connection

\Lambda DANGER



the cables

Destruction of the DC plug connectors

DC plug connectors can be destroyed by arcing if disconnected while still live. It is absolutely essential that the following shutdown sequence be carried out in the correct order:

- > Check that there is no current in any of the DC cables using a clip-on ammeter.
- \circlearrowright Ensure there is no AC/DC voltage present.
- \circlearrowright Check that there is no current using a clip-on ammeter.
- NOTE: Plug connectors may be unplugged under voltage, but never under load.
- 1 Use a screwdriver (blade width 3 mm) to push out the latch on the coupling.
- 2 Leave the screwdriver in place.
- 3 Disconnect the DC connector from the DC socket.

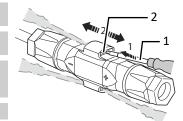


Fig. 67: Unplugging the plug connector

1 Screwdriver

2 Latch



11.6 Faults

11.6.1 Procedure

1 DANGER



Lethal voltages are still present in the connections and cables of the device even after the device has been switched off and disconnected!

Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched.

- > If a fault occurs, notify an appropriately authorized and qualified electrician or KACO new energy GmbH Service.
- > The operator can only carry out actions marked with a B.



NOTE

In case of power failure, wait for the system to automatically restart. Notify your electrician if there is an extended power failure.

11.6.2 Rectifying a fault

Fault	Possible cause	Explanation/remedy	Ву
The display is blank and the LEDs do not light up	Grid voltage not avail- able	 Check whether the DC and AC voltages are within the permit- ted limits (see Technical Data) 	E
		> Notify KACO Service.	Е
The device stops feeding into the grid shortly	Faulty grid separation relay in the device.	If the grid separation relay is defective, the device will recog- nise this error during the self-test.	K
after being switched on,		> Ensure that there is sufficient PV generator power.	Е
even though there is sunlight present.		If the grid separation relay is defective, have it replaced by KACO Service.	
		> Notify KACO Service.	
Device is active but is not feeding into the grid. The display indicates a	Grid-feed is interrupted due to a grid fault.	Due to a grid fault (over/undervoltage, over/underfrequency), the device stopped the feed-in process and disconnected from the grid for safety reasons.	
grid failure.		 Change the grid parameters within the permitted operating limits (see the "Start-Up" section). 	E
The grid fuse trips.	The grid fuse capacity is too low.	In case of a high level of solar radiation, the inverter exceeds its rated current for a short period, depending on the PV generator.	
		Select the capacity of the device's backup fuse to be somewhat higher than the maximum feed-in current (see the "Installa-tion" section).	E
		> Contact the grid operator if the grid failure continues to oc- cur.	E
The grid fuse trips.	Hardware damage on the device.	If the grid fuse trips immediately when the device goes into feed-in mode (after the start-up period is complete), the device's hardware is probably damaged.	
		> Contact KACO Service to test the hardware.	Е
The device is displaying an impossible daily peak value.	Faults in the grid.	The device continues to operate as normal without losses to the yield, even when an erroneous daily peak value is dis- played. The value is reset overnight.	
		To reset the value immediately, switch the device off by dis- connecting it from the grid and switching off the DC, then switch it back on.	E



Fault	Possible cause	Explanation/remedy	Ву	
Daily yields do not cor- respond to the yields on the feed-in meter.	Tolerances of the meas- uring elements in the device.	The measuring elements of the device have been selected to ensure maximum yields. Due to these tolerances, the daily yields shown may deviate from the values on the feed-in meter by up to 15%.		
		> No action.		
Device is active but is not feeding into the grid. Display: "Waiting for feed-in"	Generator voltage too low; grid voltage or PV generator voltage un- stable.	The PV generator voltage or power is not sufficient for feed-in (solar radiation is too low). The inverter checks the grid para- meters before the feed-in process begins. The length of time it takes to switch back on again differs from country to country, depending on applicable standards and regulations, and may be several minutes. The starting voltage may have been set in- correctly.		
		Adjust starting voltage in the Parameter menu.	Е	
Noise emission from the device.	Particular ambient con- ditions.	When there are certain ambient conditions, the devices may emit audible noises. Grid interference or grid failure caused by particular loads (motors, machines, etc.) which are either con- nected to the same point on the grid or located in the vicinity of the device. Under particular grid conditions, resonances may form between the device's input filter and the grid; these may be audible even when the device is switched off. These noise emissions do not affect the operation of the device. They do not lead to loss of performance, failure, damage or to a short- ening of the device's service life. People with very sensitive hearing (particularly children) are able to hear the high-fre- quency hum caused by the device's operating frequency of ap- proximately 17 kHz.		
		> No action	_	
n spite of high radiation evels, the inverter does not feed the maximum power into the grid.	Particular ambient con- ditions.	Because the temperatures inside the device are too high, the device reduces its power to prevent damage to the device. Note the technical data. Ensure that the convection cooling is not impeded from the exterior. Do not cover the cooling fins.		
		> Ensure sufficient cooling of the device.	В	
		> Remove any foreign bodies which are present on the device.	В	
		Clean the cooling fins	Е	
	DC fuse faulty	A generator string is disconnected from the device owing to a faulty fuse. Check why it has tripped by measuring all DC strings using a clip-on ammeter If there is no current flow in a string, the associated DC fuse is faulty.		
		Check the no-load voltage and dimensioning of the PV generator. Replace any damaged modules.	В, Е	
		> Replace the PV fuse with a fuse of the same size and type.		

Tab. 6: Troubleshooting

B = Operator's responsibility ; E = The indicated work may only be carried out by an authorised electrician. ; K = The indicated work may only be carried out by a service employee of KACO new energy GmbH!

11.7 Fault messages

Many fault signals indicate a fault in the grid. They are not operational faults of the device. The triggering levels are defined in standards, e.g. VDE0126-1-1. The device shuts down if the values exceed or fall below the approved levels.

Fault LED (red)	Status	Explanation	LED
	FS (fault status)	 Fault signal relay has been tripped. 	To:
		• Feed-in was ended due to a fault.	

K	A	C	0	
				new energy.

Fault LED (red)	Status	Explanation	LED
	OS (operating status)	The fault relay releases again.	Off
		• The device feeds back into the grid again after a country- specific time period.	

11.8 Troubleshooting

The following table lists the possible status and fault messages, the ProLog[©] status messages that the device can display by means of the LC display / web interface and the LEDs.

No.	Grid LED	LED	Display	Status description	Action	Pers
1			Waiting for feed-in	The start voltage (pre-)set in the device is higher than the actual voltage. The device waits for the solar voltage to exceed an ad- justable value and for a stable grid.	-	В
2			Generator-Spannung zu niedrig Batterie-Spannung zu niedrig	Insufficient generator voltage and power, status before the transition to night shutdown.	-	В
4			Yield counter for daily and annual yields are displayed	In cases of sufficient sunlight, the unit feeds into the grid with MPP control so as to maximise yields.	-	В
7			Self test in progr.	During the self-test, the following sequence is run through: 1. S7 (start-up) 2. S75 (load DC link) 3. S8 (relay and buffer test) Inverter ob- jective is to switch to S4	-	В
8			Self test in progr.	Self test of relays, testing of line relays prior to beginning grid feed	-	-
10	۲	۲	Temperature in unit too high	If the device overheats due to a lack of air cir- culation, the device switches off. Cause: ambi- ent temperature too high, device error.	Cool off the area around the inverter. Uncover the fans. Contact a qualified electrician.	ΒE
11	۲			Power limitation: If the generator power is too high, the device limits itself to the maximum power (e.g. around noon if the generator ca- pacity is too large).	-	-
17	۲	۲	"Powador-protect discon- nection" or "External grid protection shutdown"	The activated grid and system protection has been tripped.	Wait for reactiva- tion. Elektrofach- kraft benachrichti- gen, wenn der Fehler mehrmals auftritt!	Ε
18		۲	Resid. current shutdown	AFI shutdown as a result of a sudden residual current in the system	in Fehlerstrom wurde festgestellt. The feed-in was in- terrupted.	E
19	۲	۲	Generator insulation fault	There is an insulation fault on the PV gener- ator. The feed-in was interrupted.	There is an insula- tion fault on the PV generator. The feed-in was inter- rupted.	E
20			Active ramp limitation	Internal ramp limiting, e.g.: "Ramp Up" 10 %/ Min • After an overvoltage has been detected, for example, the device limits its output and slowly ramps up again (RampUp).	-	-

KACO blueplanet 3.0TL3 KACO blueplanet 4.0TL3 KACO blueplanet 5.0TL3 KACO blueplanet 6.5TL3 KACO blueplanet 7.5 TL3 KACO blueplanet 8.6TL3 KACO blueplanet 9.0TL3 KACO blueplanet 10.0TL3



No.	Grid LED	LED	Display	Status description	Action	Pers
21			Fehler Generator-Überstrom 1	The DC current has exceeded the permissible maximum value on PVx. A shutdown is carried out to protect the device.	-	В
22			Fehler Generator-Überstrom 2	See description in the event of a fault 21	-	В
29		۲	Check ground fault fuse	DC side ground fault A ground fault was detec- ted on the DC side. There is the option of switching this on in all country versions via a display entry. Ground fault monitoring is al- ways active in the USA.	-	E
32		۲	Self test error	The internal grid separation relay test has failed.	Elektrofachkraft benachrichtigen, wenn der Fehler mehrmals auftritt!	E
33		۲	DC feed-in error	The DC feed-in has exceeded the permitted value. This DC feed-in can be caused in the device by grid conditions and may not necessarily indicate a fault.	Notify your author- ised electrician if the fault occurs sev- eral times.	E
35		۲	Protection shutdown SW	Protective shutdown of the software (AC over- voltage, AC overcurrent, DC link overvoltage, DC overcurrent, DC overtemperature).	Kein Fehler! Grid-re- lated shutdown, the grid connects again automatically.	-
37		٠	Unknown hardware	No valid version of the power unit was detec- ted. Incorrect hardware installed.	Gerät von AC-/DC- Versorgung trennen. Nach Minuten wieder einschalten. Falls kein Erfolg Elektro- fachkraft bena- chrichtigen	ΒE
38		۲	Error: Generator Voltage too high Error: Battery over- voltage	PV overvoltage error The solar voltage of the generators has exceeded the permissible max- imum value	Notify your author- ised electrician.	E
41		۲	Line failure undervoltage L1	Grid failure over/undervoltage Lx grid voltage Lx below set minimum permissible grid voltage		E
42			Line failure overvoltage L1	See description in the event of a fault 42	Notify your author- ised electrician.	E
43		۲	Line failure undervoltage L2	See description in the event of a fault 42	Notify your author- ised electrician.	E
44		۲	Line failure overvoltage L2	See description in the event of a fault 42	Notify your author- ised electrician.	E
46		۲	Line failure overvoltage L3	See description in the event of a fault 42	Notify your author- ised electrician.	E
47		۲	Grid failure phase-to-phase voltage	The phase angle between the individual phases of the three-phase supply network is not correct, possibly no three phase connec- tion	Software-Version prüfen (Möglicher Abbruch beim Up- load) KACO-Service benachrichtigen!	B/K
48		۲	Line failure: underfreq.	Grid frequency below the minimum permiss- ible grid frequency set	Notify your author- ised electrician.	E



_						
No.	Grid LED	LED	Display	Status description	Action	Pers
49			Line failure: overfreq.	Grid frequency above the maximum permiss- ible grid frequency set	Notify your author- ised electrician.	E
50		۲	Line failure: average voltage	The grid voltage measurement according to EN 50160 has exceeded the maximum permitted limit value. This fault may be grid-related.		E
56			SPI Remote Abschaltung	Shutdown via digital input Remote control for Italy CEI 0-21 Remote trip Off	-	-
57		۲	Waiting for reactivation	Waiting time of the device following an error.	Inverter does not switch on again un- til the country-spe- cific time has elapsed.	-
58		١	Control board overtemp.	The internal temperature is too high. The device shuts down to avoid hardware damage. This error can only occur at very high ambient temperatures (>60°C)!	Provide for suffi- cient ventilation.	E
60			Generator voltage too high Battery voltage too high	The inverter does not begin feeding into the grid until the PV voltage falls below a specified value.	-	-
61			External limit x%	The grid operator has activated the external PowerControl limit. The inverter limits the power.	-	-
63			Frequency-dependent power reduction	P(f)/frequency-dependent power reduction: When certain country settings are activated, the frequency-dependent power reduction is activated.	-	-
64	۲		Output current limiting	Output current limiting: The AC current is lim- ited once the specified maximum value has been reached.	-	-
70		۲	Fan 1 error	The fan is malfunctioning.	Replace defective fan	E
73			Standalone grid err.	Grid failure: Islanding Shutdown as there is no longer a public grid.	-	-
78		۲	Resid. current shutdown (AFI)	AFI shutdown: The measured residual current has exceeded the max. permissible residual current for the device series.	Check cabling in the system.	В
79			Insulation measurement	PV generator's insulation is being measured	-	-
80		۲	Insulation meas. not pos- sible	The insulation measurement cannot be per- formed because the generator voltage is too volatile.	-	-
81		۲	Protection shutdown line volt. L1	Overvoltage has been detected on a con- ductor. An internal protective mechanism has disconnected the device to protect it against damage.	In case of repeated occurrence: Notify your authorised electrician.	E
82		۲	Protection shutdown line volt. L2	See description in the event of a fault 82	In case of repeated occurrence: Notify your authorised electrician.	E



No.	Grid LED	LED	Display	Status description	Action	Per:
83		٢	Protection shutdown line volt. L3	See description in the event of a fault 82	In case of repeated occurrence: Notify your authorised electrician.	E
84		۲	Protection shutdown under- volt. DC link	DC link voltage is too low. Protection shut- down	In case of repeated occurrence: Notify your authorised electrician.	E
85		۲	Protect. shutdown overvolt. DC link	Protective shutdown overvolt. DC link	In case of repeated occurrence: Notify your authorised electrician.	E
86		۲	Protect. shutdown DC link asymmetry	Overvoltage has been found in the DC link. An internal protective mechanism has disconnected the device to protect it against damage.	In case of repeated occurrence: Notify your authorised electrician.	E
87		۲	Schutzabschaltung Über- strom L1	A current that has been found on a conductor is too high. An internal protective mechanism has disconnected the device to protect it against damage.	In case of repeated occurrence: Notify your authorised electrician.	E
88		۲	Schutzabschaltung Über- strom L2	See description in the event of a fault 87	In case of repeated occurrence: Notify your authorised electrician.	E
89		۲	Schutzabschaltung Über- strom L3	See description in the event of a fault 87	In case of repeated occurrence: Notify your authorised electrician.	E
91			Protect. shutdown drop 2.5V	Protective shutdown drop 2.5 V	-	-
92		۲	Protect. shutdown drop 1.5V	Protective shutdown drop 1.5 V	-	-
97		۲	Protection shutdown over- current HW	Too much power has been fed into the grid. Complete disconnection of the device.	Notify authorised electrician / KACO Service!	E/K
100		۲	Protect. shutdown HW over- heating	The device has been switched off because the temperatures in the housing were too high.	Check to make sure that the fans are working. Replace fan if necessary.	ΒE
103		۲	Plausibilitätsfehler Zwis- chenkreis	The device has shut down because of implaus- ible internal measured values.	KACO-Service bena- chrichtigen!	К
104		۲	Plausibility fault AFI module	The device has shut down because of implaus- ible internal measured values.	KACO-Service bena- chrichtigen!	К
105			Plausibility fault relay	The device has shut down because of implaus- ible internal measured values.	KACO-Service bena- chrichtigen!	К
106			Plausibility error DCDC con- verter	The device has shut down because of implaus- ible internal measured values.	KACO-Service bena- chrichtigen!	К
108		۲	Line failure overvoltage L1	Shutdown because the grid voltage on phase L1 is outside the upper limit value (2-stage in- spection). 108113 quick shutdowns	-	-



No.	Grid LED	LED	Display	Status description	Action	Pers
125		۲	Fehler Relaisansteuerung	The enable signal for the relay control is read back. The shutdown is carried out if the level is incorrect. AC relay error relay control	-	-
128			Fehler interner Speicher 1	Internal RAM test in Delfino (AC-DSP) failed	-	-
130			Fehler Selbsttest AFCI- Modul	Self-test error AFCI module The AFCI module carries out cyclical self-tests on the entire measurement chain. One channel is tested every minute.	-	-
148			Fehler externer Speicher 1	External memory error 1 EEPROM on control card defective	-	-
149		۲	Kommunikationsfehler AFCI- Modul	Communication error AFCI module Delfino from AC controller has communication error with AFCI module	-	-
150		۲	Schutzabschaltung Einbruch 1.65V	Internal voltage supply incorrect. Internal ref- erence voltage of 1.65 V on control card has breached its permitted tolerance range.	-	-
151			Input current limitation DC1	No error message, merely a protective func- tion of the inverter to prevent the current car- rying capacity of the input from being ex- ceeded. Input current limitation DC1 The DC input current 1 is limited once the specified maximum value has been reached. Safety function of the inverter.	-	-
152			Input current limitation DC2	No error message, merely a protective func- tion of the inverter to prevent the current car- rying capacity of the input from being ex- ceeded. Input current limitation DC2 The DC input current 2 is limited once the specified maximum value has been reached. Safety function of the inverter.	-	-
153	0	0	Input current limitation DC3	No error message, merely a protective func- tion of the inverter to prevent the current car- rying capacity of the input from being ex- ceeded. Input current limitation DC3 The DC input current 3 is limited once the specified maximum value has been reached. Safety function of the inverter.	-	-
154		٠	Input power limitation DC1	No error message, merely a protective func- tion of the inverter to prevent the capacity of the input from being exceeded. Input power limitation DC1 The DC input power is limited once the specified maximum value has been reached. Safety function of the inverter.	-	-
155		۲	Input power limitation DC2	No error message, merely a protective func- tion of the inverter to prevent the capacity of the input from being exceeded. Input power limitation DC2 The DC input power is limited once the specified maximum value has been reached. Safety function of the inverter.	-	-



156 0 0	Input power limitation DC3	No error message, merely a protective func- tion of the inverter to prevent the capacity of the input from being exceeded. Input power limitation DC3 The DC input power is limited once the specified maximum value has been reached. Safety function of the inverter.	-	-
160	Fehler: Netzrelais L1	During the self-test, it is discovered that the grid-side L1 relay becomes stuck. The self-test does not check whether the relay switches on. Grid-side L1 relay defective	-	-

Fault number not found?

If fault numbers are displayed on the device but are not listed here, then it is usually necessary to have this looked at by your installation partner.



12 Decommissioning and dismantling

12.1 Switching off the device

⚠ DANGER

Lethal voltages are still present in the connections and cables of the device even after the device has been switched off and disconnected!

Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched.

- ightarrow The device must be mounted in a fixed position before being connected electrically.
- > Comply with all safety regulations and current technical connection specifications of the responsible power supply company.
- > The device is only permitted to be opened or serviced by a qualified electrician.
- $\,\,>\,\,$ Switch off the grid voltage by turning off the external circuit breakers.
- $^{\scriptscriptstyle >}\,$ Check that all AC and DC cables are completely free of current using a clip-on ammeter.
- $\rightarrow\,$ Do not touch the cables and/or terminals/busbars when switching the device on and off.
- > Keep the device closed when in operation.

⚠ DANGER



Destruction of the DC plug connectors

DC plug connectors can be destroyed by arcing if disconnected while still live. It is absolutely essential that the following shutdown sequence be carried out in the correct order:

 $^{\scriptscriptstyle >}\,$ Check that there is no current in any of the DC cables using a clip-on ammeter.



\rm WARNING

Risk of burns caused by hot housing components

Housing components can become hot during operation.

> During operation, only touch the housing cover on the device.

12.2 Uninstalling the device

\Lambda DANGER

Dangerous voltage due to two operating voltages



Severe injuries or death may occur if the cables and/or terminals/busbars in the device are touched. The discharge time of the capacitors is up to 5 minutes.

- Only appropriately qualified electricians authorised by the mains supply network operator are permitted to open and maintain the device.
- ightarrow Before opening the device: Disconnect the AC and DC sides and wait at least 5 minutes.

○ Device disconnected and secured against restart.

- 1 Undo the 2 screws and carefully remove the housing cover [XT_30]
- 2 Remove the interface cables.

3 Disconnect AC connection plug from the device. AC connection [See section 11.5.1] Page 72]

4 Detach the equipotential bonding cable from the grounding point [XT_30]

5 Detach the interface cables from the sockets on the communication board.

- 6 Detach the DC cables from the DC plug connectors and furnish with protective caps. DC connection [See section 11.5.2 ▶ Page 72]
- 7 Open the cable fittings [\times W_29 / \times W_19].
- 8 Pull the cables out of the device.



12.3 Disassembling the device

└ Unit has been switched off and uninstalled.

- 1 Remove the screw that prevents the device from being lifted off the mount.
- 2 Use the lateral openings and lift the device off the mount.
- » Device removed. Proceed with the packaging process.

12.4 Packaging the device

 \circlearrowright Device has been uninstalled.

1 If possible, always pack the device in the original packaging. If this is no longer available, an alternative is to use equivalent packaging.

2 You must be able to close the box completely and it must be able to accommodate the weight and size of the device.

12.5 Storing the device

A CAUTION

Property damage as a result of condensation

Faulty storage can form condensate in the device and impair the device functioning (e.g. storage outside the ambient conditions or temporary relocation from a cold to a hot environment).

- ✓ Store in accordance with the technical data > Environmental data [See section 4.3) Page 14]
- > Prior to installation, check the inner area for condensation and if necessary, allow it to dry sufficiently before installation.

[∪] Device packaged.

☞ Store the device at a dry location, in accordance with the ambient temperature range Environmental data [See section 4.3 Page 14].



13 Disposal

A CAUTION

Risk to the environment if disposal is not carried out in the correct manner



For the most part, both the device and the corresponding transport packaging are made from recyclable raw materials.

Unit: Do not dispose of faulty devices or accessories together with household waste. Ensure that the old devices and any accessories are disposed of in a proper manner.

Packaging: Ensure that the transport packaging is disposed of properly.



14 Service and warranty

If you need help solving a technical problem with one of our KACO products, please contact our service hotline.

Please have the following information ready so that we can help you quickly and efficiently:

- · Device name / serial number
- Date of installation / Start-up report
- Fault message shown on the display / Description of the fault / Did you notice anything unusual? / What has already been done to analyse the fault?
- Module type and string circuit
- · Consignment identification / Delivery address / Contact person (with telephone number)
- · Information about the accessibility of the installation site.

You can find the following items and other information at our web site Kaco-newenergy:

- · our current warranty conditions,
- · a complaint form,
- a form for registering your device. Please register your device without delay. In this manner, you can assist us in providing you with the quickest service possible.



NOTE

The maximum length of the warranty is based on the currently applicable national warranty conditions.



Ζ

15 Appendix

15.1 EU Declaration of Conformity

Manufacturer's name and address	KACO new energy GmbH		
	Carl-Zeiss Straße 1		
	74172 Neckarsulm, Germany, Germany		
Product description	Photovoltaic feed-in inverter		
Type designation	KACO blueplanet 3.0 TL3 M2 WM OD IIG0	[1001670]	
[KACO art. no.]	KACO blueplanet 4.0 TL3 M2 WM OD IIG0	[1001671]	
	KACO blueplanet 5.0 TL3 M2 WM OD IIG0	[1001205]	
	KACO blueplanet 6.5 TL3 M2 WM OD IIG0	[1001204]	
	KACO blueplanet 7.5 TL3 M2 WM OD IIG0	[1001203]	
	KACO blueplanet 8.6 TL3 M2 WM OD IIG0	[1001461]	
	KACO blueplanet 9.0 TL3 M2 WM OD IIG0	[1001202]	
	KACO blueplanet 10.0 TL3 M2 WM OD IIG0	[1001460]	

This is to confirm that the devices listed above comply with the protection requirements set forth in the Directive of the Council of the European Union of 26th February 2014 on the harmonisation of the laws of the member states relating to Electromagnetic Compatibility (2014/30/EU) and the Low Voltage Directive (2014/35/EU).

The devices conform to the following standards:

2014/35/EU	Safety of the device	
"Directive relating to electrical equipment designed for use	EN 62109-1:2010	
within certain voltage limits"	EN 62109-2:2011	
2014/30/EU	Interference immunity	
"Directive relating to electromagnetic compatibility"	EN 61000-6-1:2007	
	EN 61000-6-2:2005+AC:2005	
	Emitted interference	
	EN 55011:2016+A1:2017 group 1, class B	
	Secondary effects on the grid	
	EN 61000-3-2:2014	
	EN 61000-3-3:2013	

The types mentioned above are therefore labelled with the CE mark.

Unauthorised modifications to the supplied devices and/or any use of the devices that is contrary to their intended use render this Declaration of Conformity null and void.

This declaration of conformity is issued under the sole responsibility of KACO new energy GmbH.

Neckarsulm, 05/27/2020	Neckarsulm, 05/27/2020
KACO new energy GmbH	KACO new energy GmbH

ppa. Matthias Haag	i.V. Lyle Cristina Schlechtriem
Head of Technology	Head of Quality Management







Carl-Zeiss-Strasse 1 · 74172 Neckarsulm · Germany · Tel. +49 7132 3818-0 · Fax. +49 7132 3818-703 · info@kaco-newenergy.de · www.kaco-newenergy.de